


10-RELAY EXPANSION BOARD (TR256)

NOTE: This relay expansion board is integrated in the following receiver models:

R4-06, TG-R4-08, R4-10.

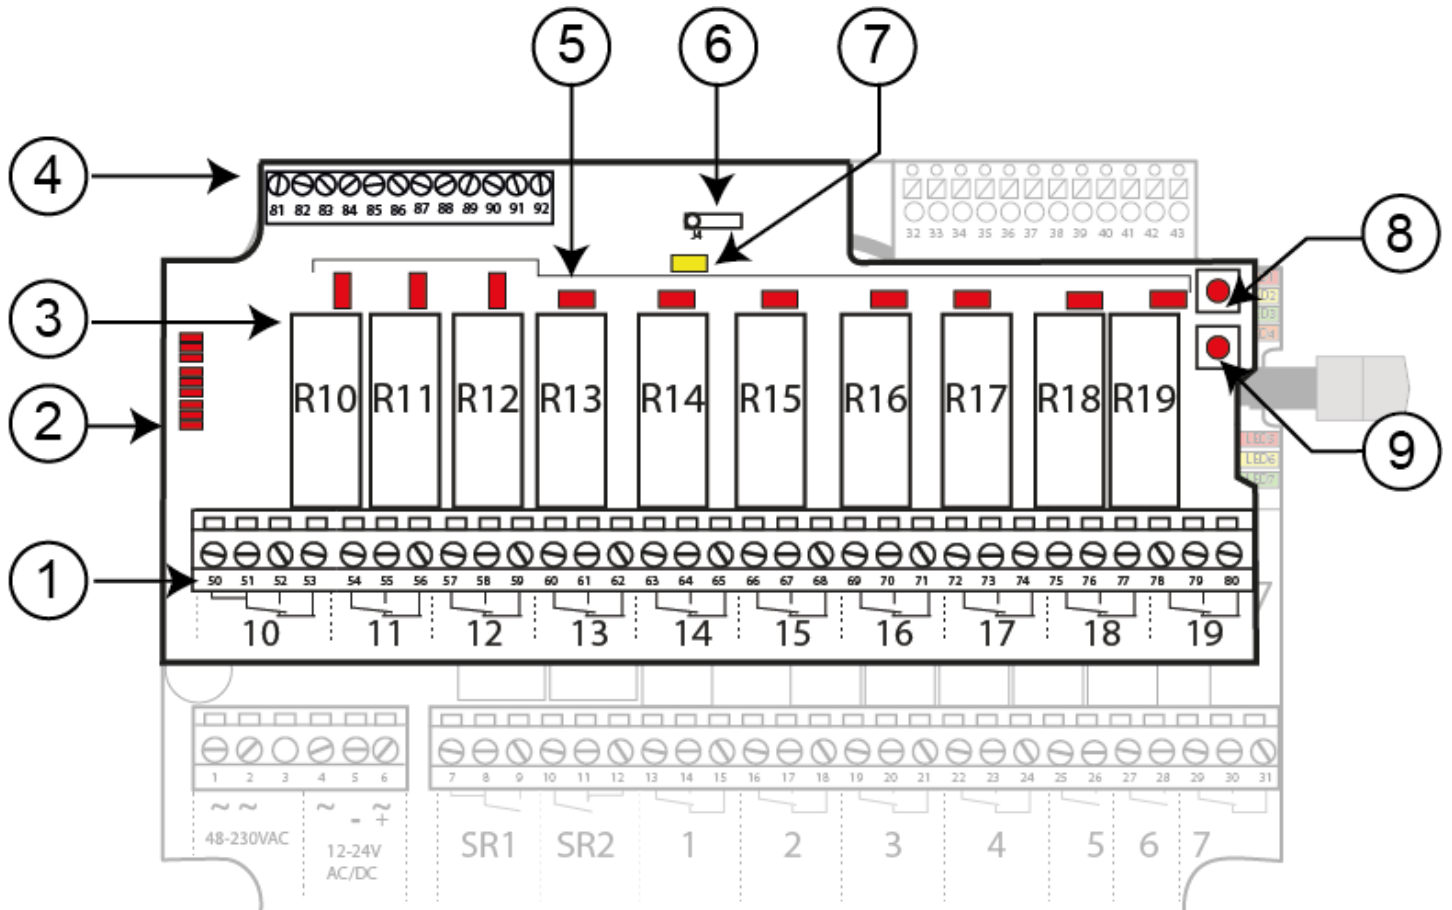

- | | |
|---|---|
| <ol style="list-style-type: none"> 1. J14-J12, J1-J10 Terminal block for function relays R10-19* 2. LED indicators for stop relays and relays R1-7 on the base board** 3. Function relays R10-19 (change-over) 4. Terminal block for digital inputs | <ol style="list-style-type: none"> 5. Relay LEDs 10-19 (red) 6. TRABUS contact 7. Power LED (yellow) 8. Function button (Cancel) 9. Select button (OK) |
|---|---|

*For more information about cable requirements, see [Terminal block for function relays on the 10-relay expansion board](#).

**See [LED indicators on the 10-relay expansion board](#)

Last updated: 01 July, 2021