

## USER INSTRUCTIONS

*Transmitters:*



*T9-01, T9-11*

*T11-05, T11-15*

safe

smart

strong

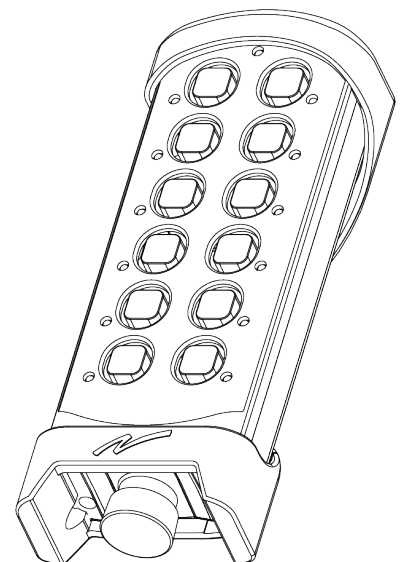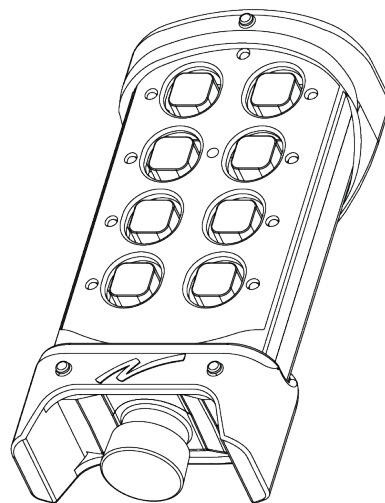

---

©Tele-Radio i Lysekil AB

August Barks gata 30A

SE-421 32 Västra Frölunda

Sweden

Phone: +46 (0)31 748 54 60

---

---

|   |           |
|---|-----------|
| <b>CHAPTER 1: INTRODUCTION</b> .....                                | <b>5</b>  |
| 1.1 About this document .....                                       | 7         |
| 1.2 About Tiger TG2 systems .....                                   | 8         |
| <b>CHAPTER 2: SAFETY</b> .....                                      | <b>9</b>  |
| 2.1 Warnings & restrictions .....                                   | 9         |
| 2.2 Safety features .....   | 11        |
| <b>CHAPTER 3: TECHNICAL DATA</b> .....                              | <b>12</b> |
| 3.1 Transmitter specifications .....                                | 12        |
| 3.2 Radio frequency band .....                                      | 14        |
| <b>CHAPTER 4: PRODUCT GENERAL DESCRIPTION</b> .....                 | <b>16</b> |
| 4.1 Transmitter front .....   | 16        |
| 4.2 Transmitter back .....  | 17        |
| 4.3 Top LED .....   | 18        |
| <b>CHAPTER 5: STATUS AND ERROR INDICATIONS</b> .....                | <b>19</b> |
| 5.1 Top LED status indication .....                                 | 19        |
| 5.2 Error indications and error code messages .....                 | 19        |
| <b>CHAPTER 6: OPERATION</b> .....                                   | <b>22</b> |
| 6.1 General information .....                                       | 22        |
| 6.2 Start-up protection .....                                       | 22        |
| 6.3 Functionality test .....  | 23        |
| 6.4 Start a session (no PIN code) .....                             | 24        |
| 6.5 Start a session (PIN code required) .....                       | 26        |
| 6.6 Log the transmitter out from a receiver .....                   | 28        |
| 6.7 Switch the transmitter off .....                                | 28        |
| <b>CHAPTER 7: BATTERY</b> .....                                     | <b>29</b> |
| 7.1 Battery precautions .....                                       | 29        |
| 7.2 Battery information .....                                       | 31        |
| <b>CHAPTER 8: FOILS</b> .....                                       | <b>35</b> |
| 8.1 Affix a foil to the transmitter .....                           | 35        |
| <b>CHAPTER 9: WARRANTY, SERVICE, REPAIRS, AND MAINTENANCE</b> ..... | <b>36</b> |
| <b>CHAPTER 10: REGULATORY INFORMATION</b> .....                     | <b>37</b> |
| 10.1 Europe .....   | 37        |
| 10.2 North America .....  | 38        |
| 10.3 Brazil .....   | 41        |

**ANNEX A: INDEX** ..... **42**

## CHAPTER 1: INTRODUCTION

### Thank you for using a Tele Radio product



**READ ALL INSTRUCTIONS AND WARNINGS CAREFULLY BEFORE OPERATING THE PRODUCTS.**

These End user instructions have been published by Tele Radio and are not subject to any guarantees. The End user instructions may be withdrawn or revised by Tele Radio at any time and without further notice. Corrections and updates will be added to the latest version of the manual. Always download the End user instructions from our website, [www.tele-radio.com](http://www.tele-radio.com), for the latest available version. Keep the safety instructions for future reference.

**IMPORTANT! These instructions are intended for end users. The instructions can be printed and handed to end user.**

Tele Radio remote controls are often built into wider applications. This documentation is not intended to replace the determination of suitability or reliability of the product for specific user applications and should not be used for this purpose. It is the responsibility of any such users or integrators to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use. Tele Radio shall not be responsible or liable for misuse of the information contained herein.

Always refer to the applicable local regulations for installation and safety requirements relating to cranes, hoists, material handling applications, lifting equipment, industrial machinery, and/or mobile hydraulic applications using Tele Radio products, e.g.:

- applicable local and industrial standards and requirements,
- applicable occupational health and safety regulations,
- applicable safety rules and procedures for the factory where the equipment is being used,
- user and safety manuals or instructions of the manufacturer of the equipment where Tele Radio remote control systems are installed.

Tele Radio End user instructions do not include or address the specific instructions and safety warnings of the end product manufacturer.

For battery precautions, see "7.1 Battery precautions".

Tele Radio products are covered by a warranty against material, construction, or manufacturing faults. See "Chapter 9: Warranty, service, repairs, and maintenance".

## 1.1 About this document

Before installing or operating the product, read the corresponding documentation carefully.

Tele Radio's product range is composed of transmitters, receivers, and accessories intended for use together as a system.

These End user instructions cover general safety issues, main technical specifications, standard operating instructions and battery information. Images shown in this document are for illustrative purposes only.

Please report any error or omission in this document, as well as any improvement or amendment suggestion to [td@tele-radio.com](mailto:td@tele-radio.com).

### 1.1.1 COPYRIGHT

Information in this document is subject to change without notice. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, photographic, mechanical (including photocopying), recording or otherwise for any purpose other than the purchaser's personal use without the written permission of Tele Radio.

### 1.1.2 TERM AND SYMBOL DEFINITIONS

The capitalized terms and symbol used herein shall have the following meaning:

- **WARNING:** indicates a hazardous situation which, if not avoided, could result in death or serious injury.
- **CAUTION:** indicates a hazardous situation which, if not avoided, will result in minor or moderate injury.
- **IMPORTANT:** is used for information that requires special consideration.
- **NOTE:** is used to address practices not related to physical injury.



This symbol is used to call attention to safety messages that would be assigned the signal words "WARNING" or "CAUTION".

## 1.2 About Tiger TG2 systems

The Tiger TG2 product range is composed of transmitters and receivers intended for use together as a system in complex lifting applications such as cranes, OHT cranes and electric hoists or mobile applications.

### 1.2.1 ABOUT T9/T11 TRANSMITTERS

T9/T11 transmitters have simplex communication with support for duplex.

T9/T11 transmitters are compatible with all R4, R9 and R10 receivers within the same frequency range.

#### *Overview of the available models*

| Model  | Step buttons transmitters |   |    |    | Display | Available frequencies |         |
|--------|---------------------------|---|----|----|---------|-----------------------|---------|
|        | Number of buttons         |   |    |    |         | 433 MHz               | 915 MHz |
|        | 6                         | 8 | 10 | 12 |         |                       |         |
| T9-01  |                           | ● |    |    | -       | ●                     |         |
| T9-11  |                           | ● |    |    | -       |                       | ●       |
| T11-05 |                           |   |    | ●  | -       | ●                     |         |
| T11-15 |                           |   |    | ●  | -       |                       | ●       |

● Standard    - Not available



## CHAPTER 2: SAFETY

### 2.1 Warnings & restrictions



**Carefully read through the following safety instructions before proceeding with the installation, configuration, operation, or maintenance of the product. Failure to follow these warnings could result in death or serious injury.**

This product must not be operated without having read and understood the User instructions and having received the appropriate training. The purchaser of this product has been instructed how to handle the system safely. The following information is intended for use as a complement to applicable local regulations and standards.

**IMPORTANT! Tele Radio remote controls are often built into wider applications.**

**These systems should be equipped with:**

- a wired emergency stop where necessary
- a brake
- an audible or visual warning signal

#### 2.1.1 OPERATION



**This radio system must not be used in areas where there is a risk of explosion.**



**This equipment is not suitable for use in locations where children are likely to be present.**



**Only qualified personnel should be permitted to access the transmitter and operate the equipment.**



- **Always follow operating and maintenance instructions as well as all applicable safety procedures and requirements.**
- **Do not open the receiver encapsulation unless you are qualified.**
- **You must satisfy the age requirements in your country for operating the equipment.**
- **It is strictly prohibited to operate the equipment under the influence of drugs, alcohol and/or medications.**
- **Always test the transmitter stop button before operating it. Press the stop button then twist and pull it out. This test should be done on each shift, without a load.**
- **Never use a transmitter if the stop button is mechanically damaged. Contact your supervisor or representative for service immediately.**
- **Never leave the transmitter unattended.**
- **Always switch the transmitter off when not in use. Store in a safe place.**
- **Keep a clear view of the work area at all times.**

### 2.1.2 MAINTENANCE




**Before maintenance intervention on any remote controlled equipments:**

- **always remove all electrical power from the equipment.**
  - **always follow lockout procedures.**
- 
- Keep the safety information for future reference. Always download the User instructions from our website, [www.tele-radio.com](http://www.tele-radio.com), for the latest available version.
  - If error messages are shown, it is very important to find out what caused them. Contact your representative for help.
  - The functionality of the stop button should be tested at least after every 200 hours' use (see "2.2.1 Stop button").
  - If the stop button is mechanically damaged, do not use the transmitter. Contact your supervisor or representative for service immediately.
  - Keep the product in a clean, dry place.
  - Do not try to open the encapsulation.

- Always contact your representative for service and maintenance work on the product.
- Keep contacts and antennas clean.
- Wipe off dust using a clean, slightly damp cloth.
- Never use cleaning solutions.
- Check the encapsulation, foils and cable for damages every day. If you use the product although the encapsulation or foil is damaged, moisture can cause serious damage to the electronics.

## 2.2 Safety features

### 2.2.1 STOP BUTTON

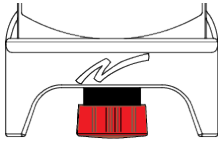

Tele Radio transmitters are equipped with a stop button. When the **Stop** button is pressed, the stop relays on the receiver deactivate.

**IMPORTANT! The Stop button should always be tested before operating the transmitter. This test should be done on each shift, without a load.**

To test the stop button:

1. Press the **Stop** button.
2. Twist and release the **Stop** button.

## CHAPTER 3: TECHNICAL DATA

### 3.1 Transmitter specifications

|  | T9-01                                      | T9-11   | T11-05  | T11-15  |
|--|--|---|---|---|
| Number of buttons                      | 8 x 2-step buttons                         |   | 12 x 2-step buttons                           |   |
| I/O switch                             | Yes  |   | No  |   |
| Power supply                           | Internal, rechargeable lithium-ion battery |   | Replaceable, rechargeable lithium-ion battery |   |
| Radio communication                    | Simplex (default), support for duplex      |   |   |   |
| Max. number of registered receivers    | 6  |   | 10  |   |
| Max. number of PIN codes               | 6  |   |   |   |
| Radio frequency band                   | 433.075–434.775 MHz                        | 903.0125–926.9875 MHz   | 433.075–434.775 MHz                           | 903.0125–926.9875 MHz   |
| Frequency management                   | 2FSK modulation (Frequency-shift keying)   | 2FSK modulation (Frequency-shift keying) and frequency-hopping spread spectrum (FHSS) | 2FSK modulation (Frequency-shift keying)      | 2FSK modulation (Frequency-shift keying) and frequency-hopping spread spectrum (FHSS) |
| Number of channels                     | 69 (channel 1–69)                          | –   | 69 (channel 1–69)                             | –   |
| Number of frequency banks              | –  | 15 (bank 1–15)  | –   | 15 (bank 1–15)  |
| Radio frequency output power           | EIRP <sup>1</sup> : < 10 dBm (10 mW)       | EIRP: < 0 dBm (1 mW)  | EIRP: < 10 dBm (10 mW)                        | EIRP: < 0 dBm (1 mW)  |
| Operating time (with continuous usage) | Approximately 24 h                         |   |   |   |
| IP code                                | IP66                                       |   | IP65  |   |

<sup>1</sup>Equivalent isotropic radiated power

---

|                       | <b>T9-01</b>                                       | <b>T9-11</b> | <b>T11-05</b>                          | <b>T11-15</b> |
|-----------------------|--|--------------|--|---------------|
| Operating temperature | -20...+55 °C / -4...+130 °F                        |              |  |               |
| Charging temperature  | +10...+35 °C / +50...+95 °F                        |              |  |               |
| Safety levels         | EN 61508 SIL3 and EN ISO 13849 PLe (Stop function) |              |  |               |
| Dimensions (LxWxH)    | 160 x 76 x 37 mm / 6.3 x 3 x<br>1.4 in             |              | 210 x 76 x 37 mm / 8.2 x 3 x<br>1.4 in |               |
| Weight                | 295 g / 0.6 lbs                                    |              | 400 g / 0.9 lbs                        |               |

## 3.2 Radio frequency band

### 3.2.1 433 MHz

For radio systems operating on frequency band 433 MHz, the frequency band is divided into 69 channels (channel 1-69). Once the channel has been selected on the transmitter, the receiver will automatically detect and switch to the same channel.

| Channel | Frequency (MHz) | Channel | Frequency (MHz) | Channel | Frequency (MHz) |
|---------|-----------------|---------|-----------------|---------|-----------------|
| 01      | 433.075         | 26      | 433.700         | 51      | 434.325         |
| 02      | 433.100         | 27      | 433.725         | 52      | 434.350         |
| 03      | 433.125         | 28      | 433.750         | 53      | 434.375         |
| 04      | 433.150         | 29      | 433.775         | 54      | 434.400         |
| 05      | 433.175         | 30      | 433.800         | 55      | 434.425         |
| 06      | 433.200         | 31      | 433.825         | 56      | 434.450         |
| 07      | 433.225         | 32      | 433.850         | 57      | 434.475         |
| 08      | 433.250         | 33      | 433.875         | 58      | 434.500         |
| 09      | 433.275         | 34      | 433.900         | 59      | 434.525         |
| 10      | 433.300         | 35      | 433.925         | 60      | 434.550         |
| 11      | 433.325         | 36      | 433.950         | 61      | 434.575         |
| 12      | 433.350         | 37      | 433.975         | 62      | 434.600         |
| 13      | 433.375         | 38      | 434.000         | 63      | 434.625         |
| 14      | 433.400         | 39      | 434.025         | 64      | 434.650         |
| 15      | 433.425         | 40      | 434.050         | 65      | 434.675         |
| 16      | 433.450         | 41      | 434.075         | 66      | 434.700         |
| 17      | 433.475         | 42      | 434.100         | 67      | 434.725         |
| 18      | 433.500         | 43      | 434.125         | 68      | 434.750         |
| 19      | 433.525         | 44      | 434.150         | 69      | 434.775         |
| 20      | 433.550         | 45      | 434.175         |         |                 |
| 21      | 433.575         | 46      | 434.200         |         |                 |
| 22      | 433.600         | 47      | 434.225         |         |                 |
| 23      | 433.625         | 48      | 434.250         |         |                 |
| 24      | 433.650         | 49      | 434.275         |         |                 |
| 25      | 433.675         | 50      | 434.300         |         |                 |

### 3.2.2 915 MHZ

Radio systems operating on frequency band 915 MHz use frequency-hopping spread spectrum (FHSS) to communicate. The frequency band is divided into 15 frequency banks (1-15). Frequency bank 8 is selected by default.


To establish a radio link between the receiver and the transmitter, both units must be configured to use the same frequency bank. Contact your representative for assistance.

## CHAPTER 4: PRODUCT GENERAL DESCRIPTION


The pictures shown in this chapter are for illustrative purposes only.

### 4.1 Transmitter front

T9-01, T9-11

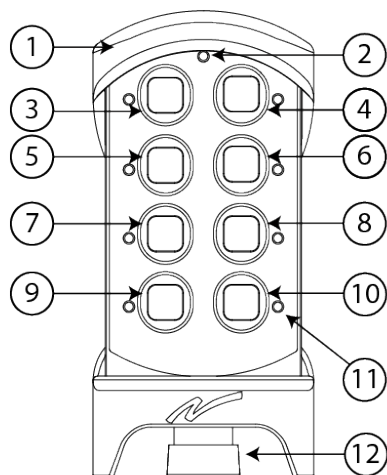

T11-05, T11-15

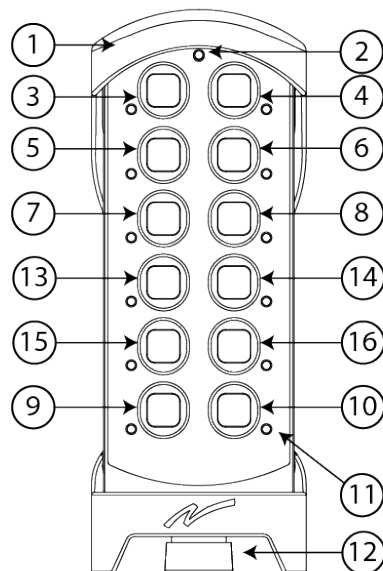

- |                 |             |   |               |
|-----------------|-------------|---|---------------|
| 1. Rubber cover | 5. Button 3 | 9. <b>Left Start</b> button (SL) <sup>1</sup>   | 13. Button 7  |
| 2. Top LED      | 6. Button 4 | 10. <b>Right Start</b> button (SR) <sup>2</sup> | 14. Button 8  |
| 3. Button 1     | 7. Button 5 | 11. Button LEDs                                 | 15. Button 9  |
| 4. Button 2     | 8. Button 6 | 12. <b>Stop</b> button                          | 16. Button 10 |

#### 4.1.1 SHIFT BUTTON

In some cases, the **right Start** button is used as a shift button to access some menus and/or channels.


To activate the shift function, press the shift button and keep it pressed. Press the button corresponding to the desired channel/ menu. Release it, then release the shift button.

<sup>1</sup>T9: button 7; T11: button 11.

<sup>2</sup>T9: button 8; T11: button 12.



## 4.2 Transmitter back

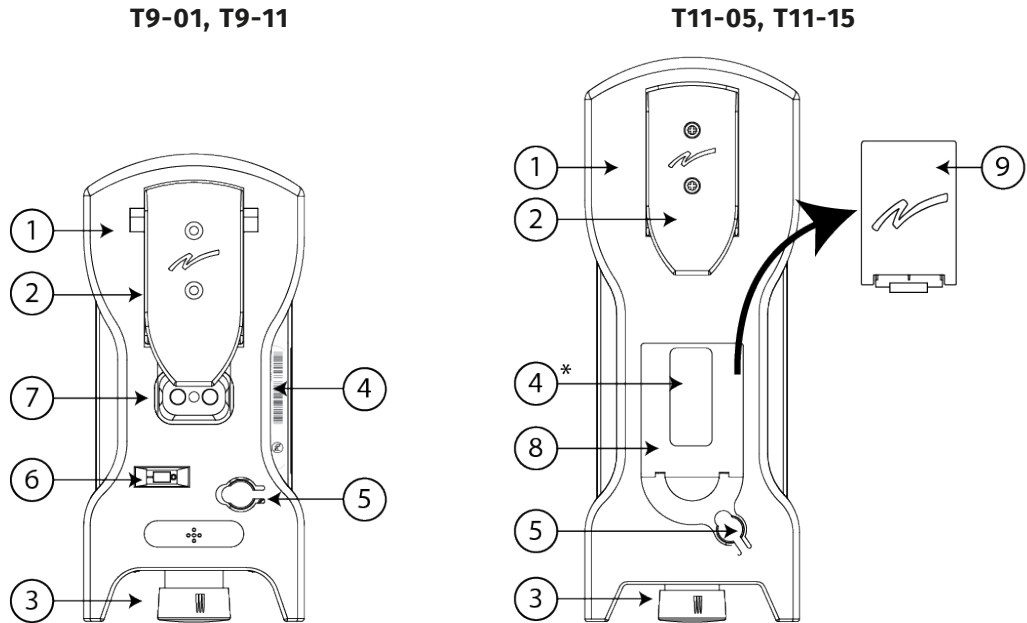

- |                       |                               |  |
|-----------------------|-------------------------------|--|
| 1. Rubber cover       | 4. Product label <sup>1</sup> | 7. Charger contacts for Tele Radio holders |
| 2. Clip               | 5. Battery charger socket     | 8. Battery compartment                     |
| 3. <b>Stop</b> button | 6. I/O switch                 | 9. Replaceable battery                     |

### 4.2.1 I/O SWITCH (T9 MODELS ONLY)


The I/O switch on the back of the transmitter interrupts the power supply from the battery. When in the O/off position, the transmitter cannot be started unless the charger plug is connected.

**IMPORTANT! When the transmitter is to be transported by air, the I/O switch must be in the O/off position.**

NOTE: The I/O switch should not be used as an on/off button for the transmitter. To start and stop the transmitter, use the **Stop** button.

<sup>1</sup>\*On T11 models, the product label is placed inside the battery compartment.

### 4.3 Top LED

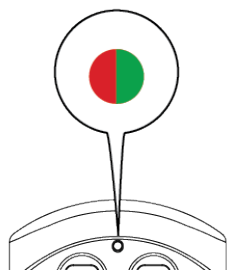

The transmitter is equipped with one bi-color LED (top LED) for battery indication and radio link information. For more details, see "Chapter 5: Status and error indications"


## CHAPTER 5: STATUS AND ERROR INDICATIONS

### 5.1 Top LED status indication

The top LED lights or flashes green when the battery capacity is good and red when the battery capacity is poor. When the top LED lights/flashes red, battery should be charged or changed at the next convenient opportunity (see "7.2.2 Charge the battery").

### 5.2 Error indications and error code messages

Each error is identified by a code indicated by a LED combination including the Top LED (LED 0), button LEDs 1–6 and SL and SR LEDs.

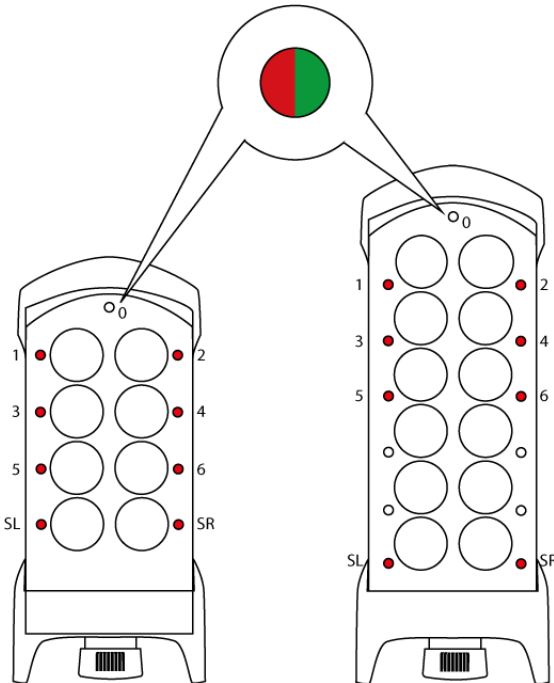

●: LED is lit (red). ○: LED is off

⊙: LED is blinking green/red.

| LED0<br>green/red | LED1<br>red | LED2<br>red | LED3<br>red | LED4<br>red | LED5<br>red | LED6<br>red | LED-<br>SL<br>red | LED-<br>SR<br>red | Indicates                             |
|-------------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------------|-------------------|---------------------------------------|
| ⊙                 | ●           | ○           | ○           | ○           | ○           | ○           | ○                 | ○                 | No correct software ID read from CPU2 |

| LED0<br>green/red | LED1<br>red | LED2<br>red | LED3<br>red | LED4<br>red | LED5<br>red | LED6<br>red | LED-<br>SL<br>red | LED-<br>SR<br>red | Indicates   |
|-------------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------------|-------------------|---|
| ●                 | ○           | ●           | ○           | ○           | ○           | ○           | ○                 | ○                 | Safe buttons has been pressed during start-up or stop button test is required |
| ●                 | ○           | ○           | ●           | ○           | ○           | ○           | ○                 | ○                 | CPU2 start-up test has failed   |
| ●                 | ○           | ○           | ○           | ●           | ○           | ○           | ○                 | ○                 | Stop button hardware failure  |
| ●                 | ○           | ○           | ○           | ○           | ●           | ○           | ○                 | ○                 | No production data received from the radio module <sup>1</sup>                |
| ●                 | ○           | ○           | ○           | ○           | ○           | ●           | ○                 | ○                 | No production data received from CPU2   |
| ●                 | ●           | ○           | ○           | ○           | ○           | ○           | ○                 | ●                 | Incompatible HW version   |
| ●                 | ○           | ●           | ○           | ○           | ○           | ○           | ○                 | ●                 | Initialization of API settings has failed <sup>2</sup>                        |
| ●                 | ○           | ○           | ●           | ○           | ○           | ○           | ○                 | ●                 | Unidentified radio <sup>3</sup>   |
| ●                 | ○           | ○           | ○           | ●           | ○           | ○           | ○                 | ●                 | Incompatible radio module (frequency)   |
| ●                 | ●           | ○           | ○           | ○           | ○           | ○           | ○                 | ○                 | CPU1 has tried to send an incorrect radio packet                              |
| ●                 | ●           | ○           | ○           | ○           | ○           | ○           | ○                 | ○                 | General timeout, operation failed   |
| ●                 | ○           | ●           | ○           | ○           | ○           | ○           | ○                 | ○                 | Login failed, an other TX is already logged in                                |
| ●                 | ○           | ○           | ●           | ○           | ○           | ○           | ○                 | ○                 | Incompatible xApp software between TX/RX                                      |

<sup>1</sup>Possibly disconnected.

<sup>2</sup>Possibly bad flash memory

<sup>3</sup>Possibly disconnected

| LED0<br>green/red | LED1<br>red | LED2<br>red | LED3<br>red | LED4<br>red | LED5<br>red | LED6<br>red | LED-<br>SL<br>red | LED-<br>SR<br>red | Indicates   |
|-------------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------------|-------------------|---|
| ●                 | ○           | ○           | ○           | ●           | ○           | ○           | ○                 | ○                 | Incompatible config-ID between TX/RX                                    |
| ●                 | ○           | ○           | ○           | ○           | ●           | ○           | ○                 | ○                 | Unexpected response from RX (general error during login/register, etc.) |
| ●                 | ○           | ○           | ○           | ○           | ○           | ●           | ○                 | ○                 | Incompatible RX/TX setting (how many unit can be registered)            |
| ○                 | ●           | ○           | ○           | ○           | ○           | ○           | ●                 | ●                 | LML not implemented   |
| ○                 | ○           | ●           | ○           | ○           | ○           | ○           | ●                 | ●                 | LML stack overflow  |
| ○                 | ○           | ○           | ●           | ○           | ○           | ○           | ●                 | ●                 | LML stack underflow   |
| ○                 | ○           | ○           | ○           | ●           | ○           | ○           | ●                 | ●                 | LML too many instructions   |
| ○                 | ○           | ○           | ○           | ○           | ●           | ○           | ●                 | ●                 | LML bad call ID   |
| ○                 | ○           | ○           | ○           | ○           | ○           | ●           | ●                 | ●                 | LML general error   |
| ○                 | ●           | ●           | ○           | ○           | ○           | ○           | ●                 | ●                 | Missing or bad binDat   |
| ○                 | ●           | ○           | ●           | ○           | ○           | ○           | ●                 | ●                 | No binDat ID  |
| ○                 | ●           | ○           | ○           | ●           | ○           | ○           | ●                 | ●                 | Bad SW ID   |
| ○                 | ●           | ○           | ○           | ○           | ●           | ○           | ●                 | ●                 | Bad SW version  |
| ○                 | ●           | ○           | ○           | ○           | ○           | ○           | ●                 | ●                 | Bad cclml version   |

## **CHAPTER 6: OPERATION**

### **6.1 General information**

To control a receiver, the transmitter must be registered and logged in to the receiver. If another transmitter is already logged in to the receiver, it must be logged out before a different transmitter can be logged in.

If no transmitter is logged in to the receiver, proceed with the login procedure before using the system. Once a transmitter has been logged in, it will remain logged in until it is manually logged out.

More than one transmitter can be registered in the receiver, but only one transmitter can be logged in at a time.

### **6.2 Start-up protection**

PIN codes can be activated to prevent unauthorized personnel from operating the transmitter.

#### **6.2.1 ENABLE START-UP PROTECTION**

To enable PIN codes for transmitter start-up protection, contact your representative for assistance. All PIN code settings require assistance.

## 6.3 Functionality test

NOTE: This list is intended for use as a support for the manufacturer of the equipment where Tele Radio remote control systems are installed.

Before operating the radio system, follow the procedure below.

**IMPORTANT! This test should be performed at each shift, without a load, and should include but not be limited to the following steps**

- Make sure that the controlled object can not cause any harm in the event of unexpected movement.
- Always follow local safety rules and start the equipment according to the corresponding instructions.
- Make sure that the transmitter can control the receiver by testing all functions.
- Make sure that the functions respond as expected.
- Make sure that all movements are as planned.
- Make sure that the stop button works correctly.
- Make sure that the stop function works correctly.
- Make sure the system stops when the battery is removed from the transmitter.

## 6.4 Start a session (no PIN code)

**To be able to control a receiver with the transmitter, the transmitter must be registered in the receiver.** If no receiver is registered, the red LED next to the **right Start** button will flash after the **Stop** button has been pulled out.



**When not in use, transmitters must be switched off and stored in a secure storage space.**



**Do not use the system if the stop button is damaged or if it does not stop the equipment. Doing so could result in serious injury or death.**

NOTE: If no action is taken within 3 minutes after the **Stop** button has been released, the transmitter will turn off. Press the **Stop** button before making a new attempt to start the transmitter.

NOTE: The last accessed receiver(s) will automatically be selected the next time the transmitter is started.

1. Make sure that the **Stop** button is pressed.
2. Twist and release the **Stop** button.  
*The top LED lights.*  
The receiver(s) selected in the last session are indicated by the corresponding red lit LED. Go to step 4 to log in to the previously selected receiver, go to next step to select another receiver.  
If no receiver is selected, the red LEDs for all available receivers will flash.
3. Press the button(s) corresponding to the receiver(s) to operate.  
*The respective red LEDs stop flashing and remain lit. Both start button LEDs flash.*  
To cancel, press the same button again. The corresponding red LED starts flashing. Both start button LEDs go out.
4. Press and hold both **Start** buttons simultaneously.  
*The buzzer emits a beep.*
5. Release both **Start** buttons.  
*The buzzer stops beeping. The top LED flashes.*



When a radio link has been established, the top LED stops flashing and remains lit, the selected receivers red LEDs go out and the stop relays activate.

6. Proceed with the functional test (see "6.3 Functionality test").

If no radio link is established within 25 seconds, the transmitter will turn off. Go back to step 1 and try again.

## 6.5 Start a session (PIN code required)

**To be able to control a receiver with the transmitter, the transmitter must be registered in the receiver.** If no receiver is registered, the red LED next to the **right Start** button will flash after the **Stop** button has been pulled out.



**When not in use, transmitters must be switched off and stored in a secure storage space.**



**Do not use the system if the stop button is damaged or if it does not stop the equipment. Doing so could result in serious injury or death.**

NOTE: If no action is taken within 3 minutes after the **Stop** button has been released, the transmitter will turn off. Press the **Stop** button before making a new attempt to start the transmitter.

NOTE: The last accessed receiver(s) will automatically be selected the next time the transmitter is started.

1. Make sure that the **Stop** button is pressed.
2. Twist and release the **Stop** button.  
*The top LED lights.*  
 If a PIN code is required, it will be indicated as follow.  
**T9:** LEDs 1–6 flash red; **T11:** LEDs 1–10 flash red
3. Enter the PIN code (4 digits). Use the buttons according to the following table.

| Digit | T9-01, T9-11  | T11-05, T11-15 |
|-------|---|----------------|
| 1–6   | Buttons 1–6   |                |
| 7     | Press and hold button 8 (shift)<br>+ press button 1 | Button 7       |
| 8     | Press and hold button 8 (shift)<br>+ press button 2 | Button 8       |
| 9     | Press and hold button 8 (shift)<br>+ press button 3 | Button 9       |
| 0     | Press and hold button 8 (shift)<br>+ press button 4 | Button 10      |

*The receiver(s) selected in the last session are indicated by the corresponding red lit LED.*

Go to step 5 to log in to the previously selected receiver, go to next step to select another receiver.

If no receiver is selected, the red LEDs for all available receivers will flash.

4. Press the button(s) corresponding to the receiver(s) to operate.  
*The respective red LEDs stop flashing and remain lit. Both start button LEDs flash.*  
To cancel, press the same button again.  
*The corresponding red LED starts flashing. Both start button LEDs go out.*
5. Press and hold both **Start** buttons simultaneously.  
*The buzzer emits a beep.*
6. Release both **Start** buttons.  
The buzzer stops beeping. The top LED flashes. .  
When a radio link has been established, the top LED stops flashing and remains lit, the selected receivers red LEDs go out and the stop relays activate.
7. Proceed with the functional test (see "6.3 Functionality test").

If no radio link is established within 25 seconds, the transmitter will turn off. Go back to step 1 and try again.

## 6.6 Log the transmitter out from a receiver

A transmitter already logged in to the receiver has to be logged out before any other transmitter can be logged in. If a transmitter has been lost or seriously damaged, use the replace procedure on the transmitter.

NOTE: Logout can only be performed when the transmitter is on and a radio link with one or more receivers has been established. The receiver must be powered-up for the logout procedure to be successful.

NOTE: The logout procedure will log the transmitter out from all receivers that are part of the radio session.

### 6.6.1 QUICK LOGOUT

1. Make sure that the transmitter is started. If not, twist and release the **Stop** button.
2. Press and hold the **left Start** button.<sup>1</sup>
3. Press the **Stop** button.  
*The top LED lights (red).*
4. Release the **left Start** button.  
The transmitter takes approximately 3 seconds to logout. The transmitter turns off.

## 6.7 Switch the transmitter off

NOTE: When the transmitter is switched off, it remains logged in to the receiver(s). To logout, see "6.6 Log the transmitter out from a receiver"

When the transmitter is active and the stop button is pressed, all relays on the receiver deactivate.

1. Press the **Stop** button.  
*The transmitter turns off. All relays on the receiver deactivate.*

---

<sup>1</sup>T9: button 7; T11: button 11.

## CHAPTER 7: BATTERY

### 7.1 Battery precautions

Carefully read the following safety instructions and warnings before using, charging or disposing of the batteries.



**Batteries contain flammable substances such as lithium or other organic solvents, which may result in overheating, rupture or combustion. Failure to read and follow the below instructions may result in fire, personal injury and damage to property if charged or used improperly.**

#### 7.1.1 HANDLING AND STORAGE



- Risk of explosion if battery is replaced with a battery of an incorrect type.
- Do not short-circuit, disassemble, deform or heat batteries.
- Never attempt to charge a visibly damaged or frozen battery.
- Do not use or charge the battery if it appears to be leaking, deformed or damaged in any way.
- Do not solder directly onto batteries.
- Do not leave the battery in the charger once it is fully charged.
- Store in a cool location. Keep batteries away from direct sunlight, high temperature, and high humidity.
- Immediately discontinue use of the battery if, while using, charging, or storing the battery, the battery emits an unusual smell, feels hot, changes color, changes shape, or appears abnormal in any other way.
- Keep batteries out of reach of small children. Should a child swallow a battery, consult a physician immediately.

### 7.1.2 DISPOSAL

When discarding batteries, insulate the + and - terminals of batteries with insulating/ masking tape.



- **Do not place multiple batteries in the same plastic bag.**
- **Do not incinerate or dispose of batteries in fire.**
- **Do not place used batteries in the household waste. Dispose of used batteries in accordance with the applicable regulations and legal requirements.**
- **Batteries that have been disposed of incorrectly may short circuit, causing them to become hot, burst or ignite.**

## 7.2 Battery information

NOTE: Only batteries approved by Tele Radio should be used in T9/T11 transmitters.

NOTE: When the battery capacity reaches approximately 10 %, the top LED lights red.

|                      | <b>T9-01, T9-11</b>                         | <b>T11-05, T11-15</b>   |
|----------------------|---|---|
| Type of battery      | Internal, rechargeable lithium-ion battery  | Replaceable, rechargeable lithium-ion battery                                       |
| Article number       | -   | M245060 (D4-02)   |
| Operating time       | ~ 24 h with continuous usage                |   |
| Charge               | Charger plug on the back of the transmitter | - Charger plug on the back of the transmitter or                                    |
| Charger <sup>1</sup> | Tele Radio AB AC adapter                    | - Charger unit<br>Tele Radio AB charger unit together with Tele Radio AB AC adapter |
| Article number       | M769780                                     | M769755 + M769780   |
| Charging time        | Approximately 4 hours with an empty battery |   |
| Charging temperature | +10...+35 °C / +50...+95 °F                 |   |
| Storage temperature  | -20...+55 °C / -4...+130 °F                 |   |

<sup>1</sup>Must be purchased separately.

### 7.2.1 REMOVAL OF THE INTERNAL BATTERY (T9)


Electronics and batteries must be physically separated before disposal.

1. Remove the clip. Use a screwdriver to remove the screws.
2. Remove the rubber cover by hand.
3. Use a screwdriver to remove the screws in the back of the transmitter.
4. Gently pull to release the back encapsulation (black).
5. Remove the back encapsulation by hand.
6. Turn it over so the circuit board is facing upwards.
7. Use a screwdriver to remove the screw(s) on the circuit board.
8. Unplug connectors, if any.
9. Gently lift up the circuit board by hand. The battery pack is located behind the circuit board.
10. Remove the battery by hand.




## 7.2.2 CHARGE THE BATTERY

**NOTE:** For T9 transmitters, the 1/O switch must be in the 1/on position when charging.

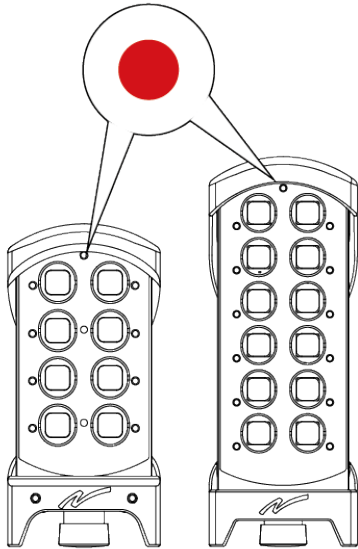


1. When the battery capacity reaches approximately 10 %, the top LED lights red and the internal buzzer beeps 3 times.

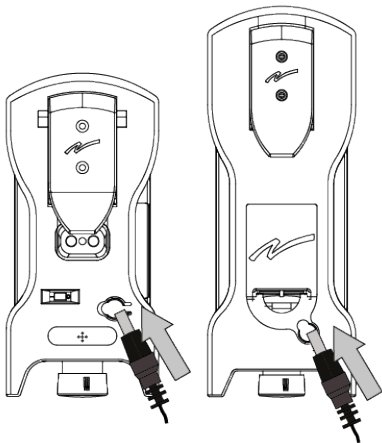


2. Lift the protection cap and insert the charger plug into the socket on the back of the transmitter. The top LED flashes red while the battery is charging.  
If the transmitter has a replaceable rechargeable battery, it can be removed and recharged using the Tele Radio AB charger unit, see below.

Charger unit:

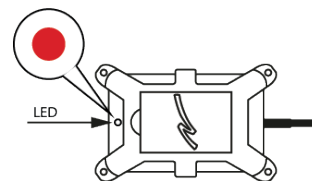


The charger's LED lights red while the battery is charging.

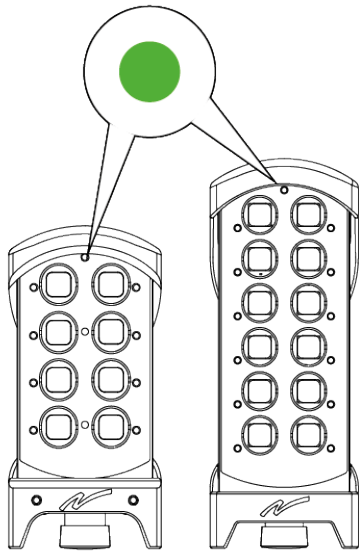

3. The top LED turns green when the battery is fully charged,


Charger unit:

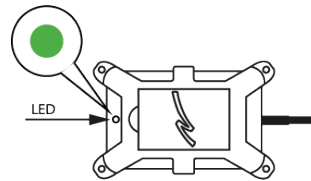

The charger's LED turns green when the battery is fully charged.

4. Remove the charger plug and close the protection cap.

For external batteries, remove the battery from the charger unit and put it back in the transmitter.

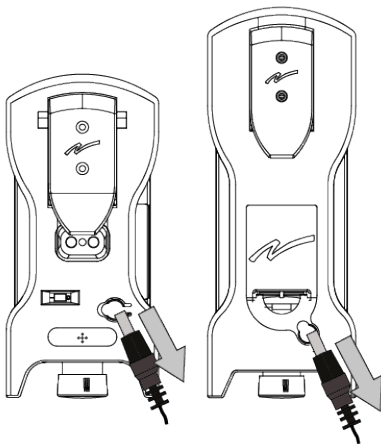

## CHAPTER 8: FOILS

Foils are used to customized transmitters depending on the application. Tele Radio foils are made of durable, soft, flexible GO-PU/SM polyurethane film with a semi-matt surface on the front side.

Before affixing a foil to a transmitter, read the recommendation below.

- To obtain optimum adhesion, the bonding surfaces must be clean, dry and well unified. Some typical surface cleaning solvents are isopropyl alcohol (99.5%) or heptane.

**NOTE:** Carefully read and follow the manufacturer's precautions and directions for use when working with solvents. These cleaning recommendations may not be compliant with the rules of certain Air Quality Management Districts in California; consult applicable rules before use.

- Ideal tape application temperature range is 21 °C to 38 °C ( 70 °F to 100 °F).
- Initial tape application to surfaces at temperatures below 10 °C (50 °F) is not recommended because the adhesive becomes too firm to adhere readily. However, once properly applied, low temperature holding is generally satisfactory.

### 8.1 Affix a foil to the transmitter

1. Wipe the front of the transmitter with rubbing alcohol or other appropriate cleaner that won't leave any residue.
2. Dry with a clean cloth.
3. Peel off one side of the backing paper.
4. Position the side of the foil on the corresponding side of the transmitter.
5. While holding onto the side, gently press the foil onto the surface from the side out to the center.
6. Peel away the rest of the backing paper .
7. Slowly apply the other side of the foil, gently press from the center to the end.
8. Inspect the foil. If you see loose areas or bubbles, the surface probably wasn't warm or clean enough. Press the foil firmly against the surface to ensure good adhesion.

## CHAPTER 9: WARRANTY, SERVICE, REPAIRS, AND MAINTENANCE

Tele Radio products are covered by a warranty against material, construction and manufacturing faults. During the warranty period, Tele Radio may replace the product or faulty parts. Work under warranty must be performed by Tele Radio or by an authorized service center specified by Tele Radio.

The following are **not** covered by the warranty:

- Faults resulting from normal wear and tear
- Parts of a consumable nature
- Products that have been subject to unauthorized modifications
- Faults resulting from incorrect installation and use
- Damp and water damage

### Maintenance

- Repairs and maintenance must be performed by qualified personnel
- Only use spare parts from Tele Radio
- Contact your representative for service or any other assistance
- Keep the product in a clean, dry place
- Keep contacts and antennas clean
- Wipe off dust using a slightly damp, clean cloth

NOTE: Never use cleaning solutions or high-pressure washer.

## CHAPTER 10: REGULATORY INFORMATION

NOTE: Models including additional naming conventions:

| Model      | Article names | Additional naming conventions         |
|------------|---------------|---------------------------------------|
| <b>T9</b>  | <b>T9-01</b>  | T9-1, T00009-01, TG-T9-1, TG-T9-01    |
|            | <b>T9-11</b>  | T00009-11, TG-T9-11                   |
| <b>T11</b> | <b>T11-05</b> | T11-5, T00011-05, TG-T11-5, TG-T11-05 |
|            | <b>T11-15</b> | T00011-15, TG-T11-15                  |

### 10.1 Europe

Applies to: **T9-01, T11-05**

#### 10.1.1 CE MARKING



Hereby, Tele-Radio i Lysekil AB, declares that the product(s) listed above is/are in compliance with the Radio Equipment Directive 2014/53/EU.

The latest version of the complete EU Declaration of Conformity is available at the following website: [www.tele-radio.com](http://www.tele-radio.com).

#### 10.1.2 WEEE DIRECTIVE



This symbol means that inoperative electrical and electronic products must not be mixed with household waste. The European Union has implemented a collection and recycling system for which producers are responsible. For proper treatment, recovery and recycling, please take this product to a designated collection point.

Tele Radio strives to minimize the use of hazardous materials, promotes reuse and recycling, and reduces emissions to air, soil and water. When a commercially viable alternative is available, Tele Radio strives to restrict or eliminate substances and materials that pose an environmental, health or safety risk.

## 10.2 North America

Applies to: **T9-11, T11-15**

### 10.2.1 FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To satisfy FCC RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended.

The radio module in this product is labelled with its own FCC ID and IC number. The FCC ID and IC is not visible when the radio module is installed inside another device. Therefore, the outside of the device into which the module is installed must also display a label referring to the radio module. The final end device must be labelled in a visible area with the following:

“Contains FCC ID: ONFC1108A”

“Contains IC: 4807A-C1108A”

### 10.2.2 IC STATEMENT

This product complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage;
2. l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

To satisfy IC RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.

Afin d'assurer la conformité aux exigences de la IC en matière d'exposition aux RF, une distance de séparation d'au moins 20 cm doit être maintenue entre l'antenne de cet appareil et toute personne à proximité pendant le fonctionnement de l'appareil. Pour assurer le respect de ces exigences, il n'est pas recommandé d'utiliser l'appareil à une distance inférieure à celle-ci.

The radio module in this product is labelled with its own FCC ID and IC number. The FCC ID and IC is not visible when the radio module is installed inside another device. Therefore, the outside of the device into which the module is installed must also display a label referring to the radio module. The final end device must be labeled in a visible area with the following:

Le module radio est étiqueté avec sa propre identification FCC et son propre numéro de certification IC. L'identification FCC et le numéro de certification IC ne sont pas visibles lorsque le module est installé à l'intérieur d'un autre dispositif, c'est la raison pour laquelle la partie externe du dispositif dans lequel le module est installé doit également présenter une étiquette faisant référence au module inclus. Le produit final doit être étiqueté sur une zone visible avec les informations suivantes :

“Contains FCC ID: ONFC1108A”

“Contains IC: 4807A-C1108A”

### 10.2.3 FCC/IC LABELS

The radio module in this product is labeled with its own FCC ID and IC numbers. The FCC ID and IC numbers are not visible when the radio module is installed inside another device. Therefore, the outside of the device into which the module is installed must also display a label referring to the enclosed radio module. The final end device must be labeled in a visible area with the following:

"Contains FCC ID: ONFC1108A"

"Contains IC: 4807A-C1108A"

The FCC and IC numbers are found on the product label.

### 10.2.4 RADIO MODULE

The following products described in these instructions contain the radio modules:

| <b>PRODUCT</b> | <b>RADIO MODULE</b> |
|----------------|---------------------|
| T9-11, T11-15  | D00005-06           |



## 10.3 Brazil

Applies to: **T9-01, T11-05**

### 10.3.1 ANATEL STATEMENT (DECLARAÇÃO ANATEL)

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

Este produto não é apropriado para uso em ambientes domésticos, pois poderá causar interferências eletromagnéticas que obrigam o usuário a tomar medidas necessárias para minimizar estas interferências.

## ANNEX A: INDEX

### A

|                        |    |
|------------------------|----|
| ANATEL Statement ..... | 41 |
|------------------------|----|

### B

#### Battery

|                                   |    |
|-----------------------------------|----|
| Battery information .....         | 31 |
| Charge .....                      | 33 |
| Removal of internal battery ..... | 32 |
| Battery precautions .....         | 29 |
| Handling .....                    | 29 |
| Storage .....                     | 29 |

### C

|                            |        |
|----------------------------|--------|
| CE marking .....           | 37     |
| Charging temperature ..... | 13, 31 |

### D

|                  |    |
|------------------|----|
| Dimensions ..... | 13 |
| Disposal .....   | 30 |

### F

|                            |    |
|----------------------------|----|
| FCC statement .....        | 38 |
| FCC/IC labels .....        | 40 |
| Foils .....                | 35 |
| Frequency management ..... | 12 |
| Functionality test .....   | 23 |


### I

|                    |    |
|--------------------|----|
| IC Statement ..... | 39 |
| IP code .....      | 12 |

|                                    |    |
|------------------------------------|----|
| <b>L</b>                           |    |
| Log out .....                      | 28 |
| Quick logout .....                 | 28 |
| <b>M</b>                           |    |
| M245060 .....                      | 31 |
| Maintenance .....                  | 36 |
| <b>N</b>                           |    |
| Number of channels .....           | 12 |
| Number of frequency banks .....    | 12 |
| <b>O</b>                           |    |
| Operating temperature .....        | 13 |
| Operating time .....               | 12 |
| <b>P</b>                           |    |
| Power supply .....                 | 12 |
| <b>R</b>                           |    |
| Radio frequency band .....         | 12 |
| 433 MHz .....                      | 14 |
| 915 MHz .....                      | 15 |
| Frequency channels .....           | 14 |
| Radio frequency output power ..... | 12 |
| Radio module .....                 | 40 |
| <b>S</b>                           |    |
| Safety Features .....              | 11 |
| Safety levels .....                | 13 |
| Start-up protection .....          | 22 |
| Start a session .....              | 24 |
| Start with PIN code .....          | 26 |

|                               |       |
|-------------------------------|-------|
| Start the transmitter .....   | 24    |
| Start with PIN code .....     | 26    |
| Stop button .....             | 11    |
| Storage temperature           |       |
| Battery .....                 | 31    |
| Switch off .....              | 28    |
| <b>T</b>                      |       |
| Top LED .....                 | 18-19 |
| Transmitter back .....        | 17    |
| Transmitter front views ..... | 16    |
| <b>W</b>                      |       |
| Warnings & restrictions ..... | 9     |
| Maintenance .....             | 10    |
| Operation .....               | 9     |
| WEEE directive .....          | 37    |
| Weight .....                  | 13    |

This page intentionally left blank.

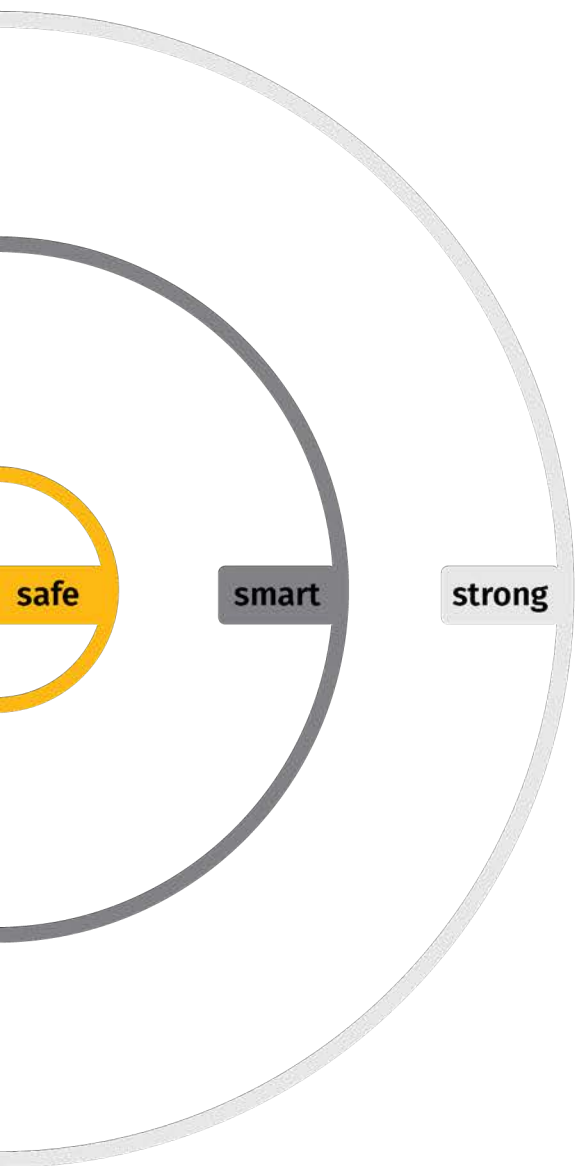

 **tele radio**<sup>®</sup>  
wireless solutions

These user instructions are subject to change without prior notice.  
Download the latest instructions from [www.tele-radio.com](http://www.tele-radio.com).