

Installation Instructions for Software System Tiger

Gültig für folgende Produkte

TG-R4-1	TG-R4-41	TG-T9-2	TG-T12-20
TG-R4-3	TG-R4-43	TG-T9-11	TG-T12-22
TG-R4-5	TG-R4-45	TG-T9-12	TG-T12-23
TG-R4-6	TG-R10-1	TG-T9-22	TG-T12-24
TG-R4-8	TG-R10-2	TG-T11-4	TG-T12-25
TG-R4-10	TG-R9-1	TG-T11-5	TG-T12-35
TG-R4-26	TG-R9-2	TG-T11-14	TG-T14-7
TG-R4-28	TG-R9-6	TG-T11-15	TG-T14-8
TG-R4-36	TG-R9-11	TG-T11-20	TG-T15-7
TG-R4-38	TG-T9-1	TG-T11-24	TG-T15-8
D0008-**			

Inhaltsverzeichnis

1.	Tele Radio© Software	3
1.1	Software Download	3
1.2	Tele Radio© Programmer	3
2.	Software Kit	4
2.1	Needed Parts	4
2.2	Assembly of the Parts	4
3.	Connection to TG-T9 / T14 & T15 Transmitter	5
4.	Connection to TG-T11 Transmitters	6
5.	Connection to TG-T12 Transmitters	7
6.	Connection to TG-R9 Receiver	8
5.	Connection to TG-R4 Receiver	9
6.	Connection to D0008 & TG-LX Modul	10
7.	Troubleshooting	11

1. Tele Radio© Software

Tel.: +49 (0) 9451 - 944 855 0

1.1 Software Download

kontakt@tele-radio-gmbh.de

Download the current software version from our website.

Link: <https://software.tele-radio-gmbh.de/>

Needed software: „Programmer TIGER G2 / PANTHER“

1.2 Tele Radio© Programmer

The programmer is used to program the software files with standard or custom firmware to the receiver/transmitter.


You cannot change these files!

The programming files are saved as .trf-files.

[TRF = Tele Radio Firmware]

The option “Erase Settings After Programming” must not be activated.

Except if you're programming the standard firmware.

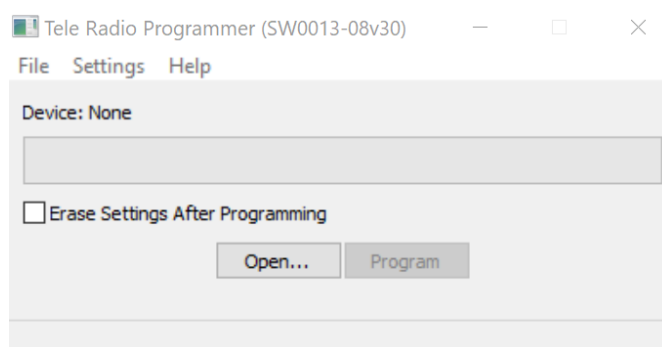

2. Software Kit

Tel.: +49 (0) 9451 - 944 855 0

2.1 Needed Parts

kontakt@tele-radio-gmbh.de


The Software kit consists of the following parts:

1. USB-A to USB-B cable (not included)
2. [D2-3] programming adapter
3. [CABLE004-5] programming cable



2.2 Assembly of the Parts

1. Connect the USB-B cable to the D2-3 programming adapter
2. Connect the CABLE004-5 with the D2-3 programming adapter. (Depends on the product you want to program)
3. Connect the USB-A cable with your PC/Laptop.

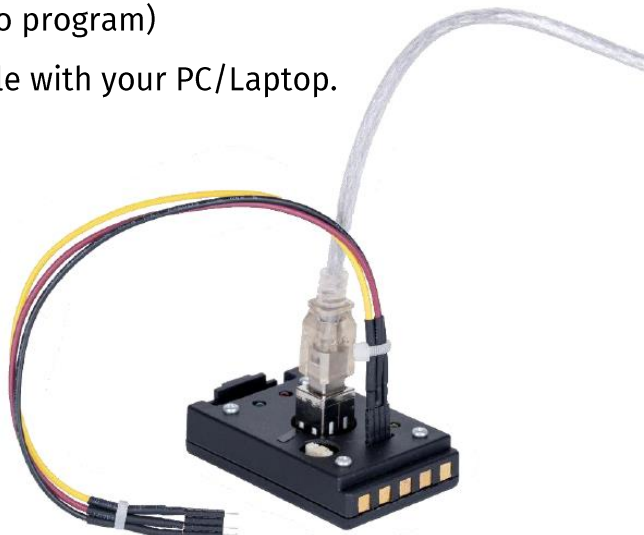


3. Connection to TG-T9 / T14 & T15 Transmitter

Tel.: +49 (0) 9451 - 944 855 0

kontakt@tele-radio-gmbh.de

1. Remove the clip at the back of the transmitter.
2. Connect the CABLE004-5 with the D2-3 programming adapter
3. Connect the other side of the CABLE004-5 with the transmitter
4. Switch the flight mode switch to "ON"
5. Release the STOP-button
6. The connection is active when the green LED on the D2-3 programming adapter is lit on. Check the connection if the red LED is lit on. If you have problems, please contact the Tele Radio customer service.
7. The orange LED is flashing during the programming process.

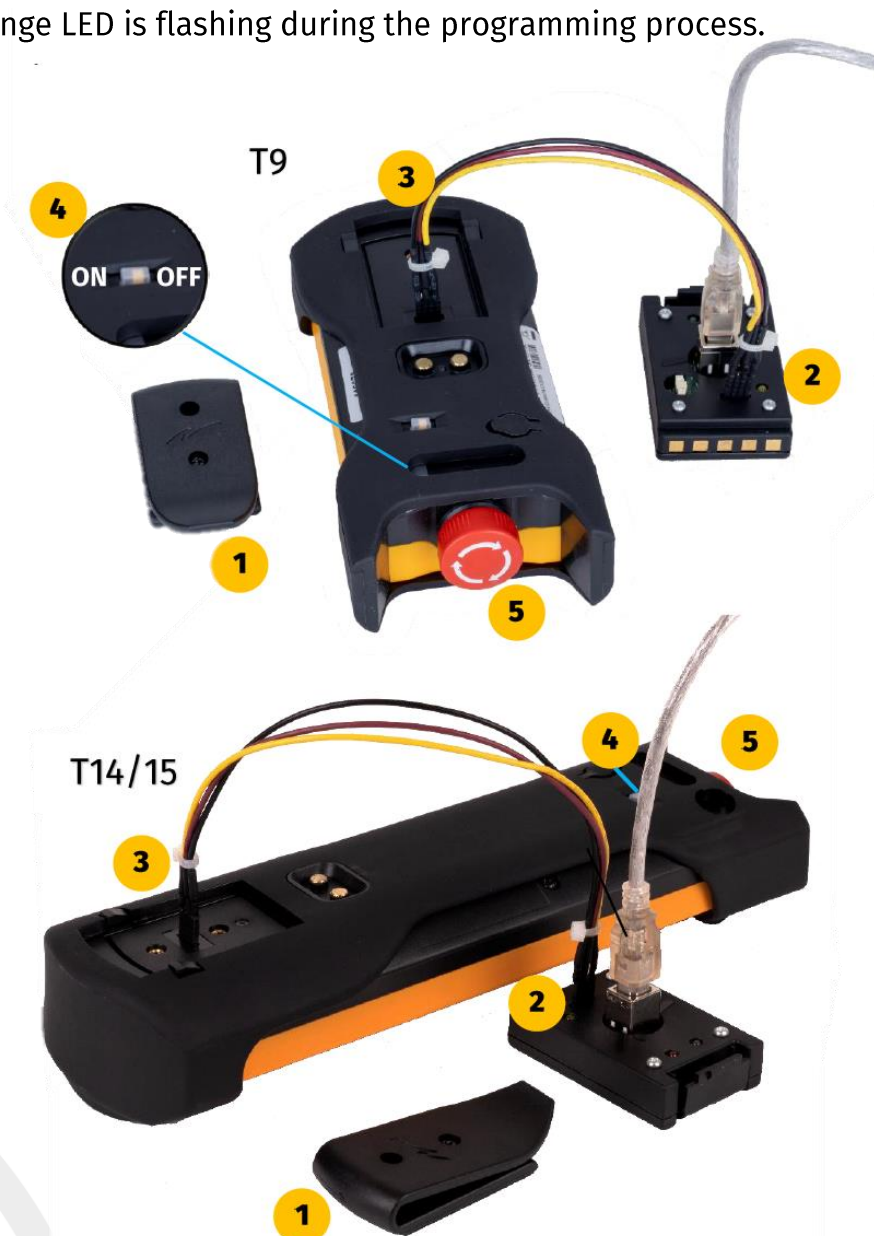

4. Connection to TG-T11 Transmitters

Tel.: +49 (0) 9451 - 944 855 0

kontakt@tele-radio-gmbh.de

1. Connect the USB-B cable to the D2-3 programming adapter
2. Remove the battery from the transmitter and insert the D2-3 programming adapter
3. Release the STOP-button
4. The connection is active when the green LED on the D2-3 programming adapter is lit on. Check the connection if the red LED is lit on. If you have problems, please contact the Tele Radio customer service.
5. The orange LED is flashing during the programming process.



5. Connection to TG-T12 Transmitters

Tel.: +49 (0) 9451 - 944 855 0

kontakt@tele-radio-gmbh.de

1. Connect the USB-B cable to the D2-3 programming adapter
2. Remove the battery from the transmitter and insert the D2-3 programming adapter
3. Release the STOP-button
4. The connection is active when the green LED on the D2-3 programming adapter is lit on. Check the connection if the red LED is lit on. If you have problems, please contact the Tele Radio customer service.
5. The orange LED is flashing during the programming process.




6. Connection to TG-R9 Receiver

Tel.: +49 (0) 9451 - 944 855 0

kontakt@tele-radio-gmbh.de

1. Remove the receiver lid
2. Connect the receiver to a permissible power supply.
3. Connect the USB-B cable to the receiver
4. Wait 3 – 5 seconds before you are going to program the receiver!

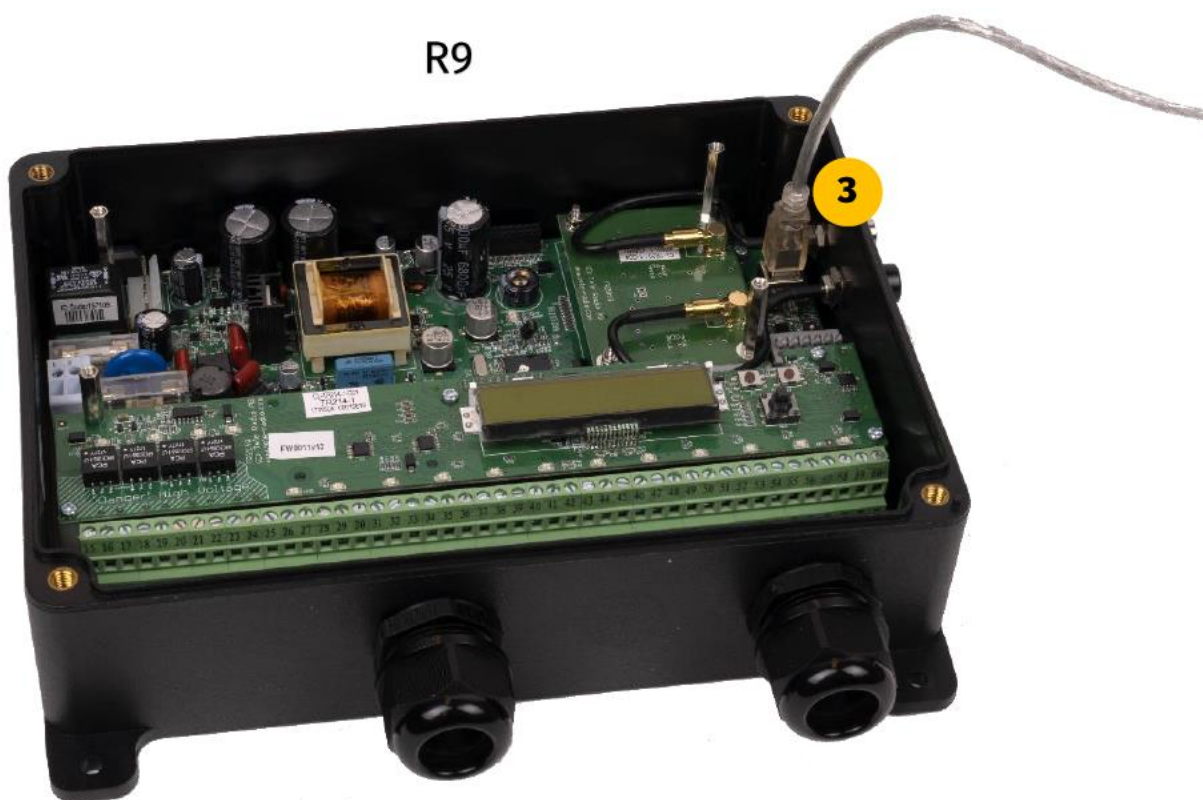


5. Connection to TG-R4 Receiver

Tel.: +49 (0) 9451 - 944 855 0


kontakt@tele-radio-gmbh.de

1. Remove the receiver lid
2. Connect the receiver to a permissible power supply
3. Connect the CABLE004-5 to the D2-3 programming adapter
4. Connect the other side of the CABLE004-5 with the receiver
5. The connection is active when the green LED on the D2-3 programming adapter is lit on. Check the connection if the red LED is lit on. If you have problems, please contact the Tele Radio customer service.
6. The orange LED is flashing during the programming process.


R4-1/3/5

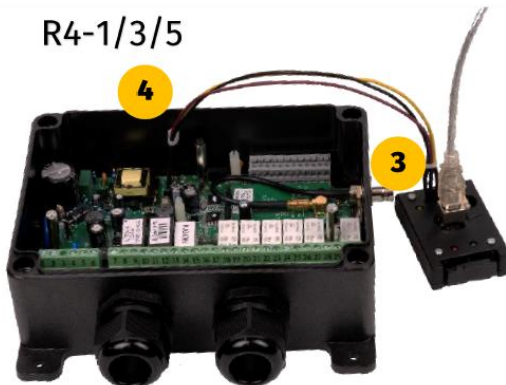


R4-6/8/10

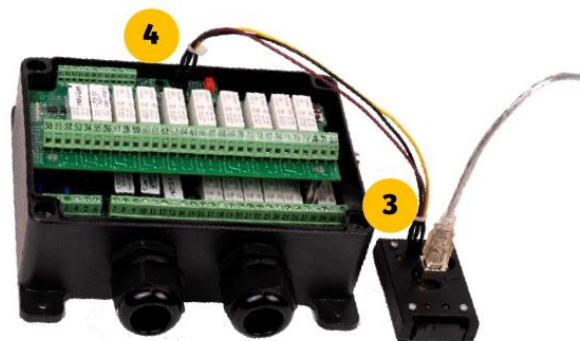

R4-26/28/41/43/45

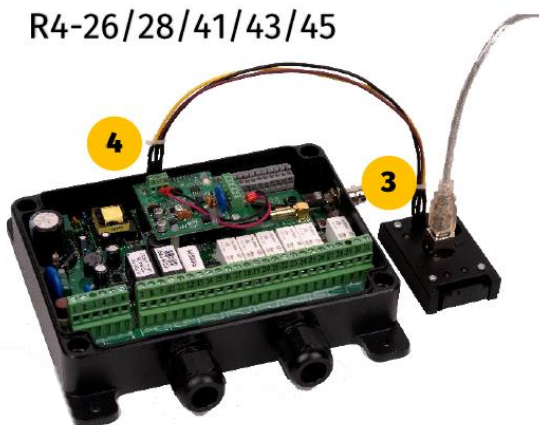

R4-36/38

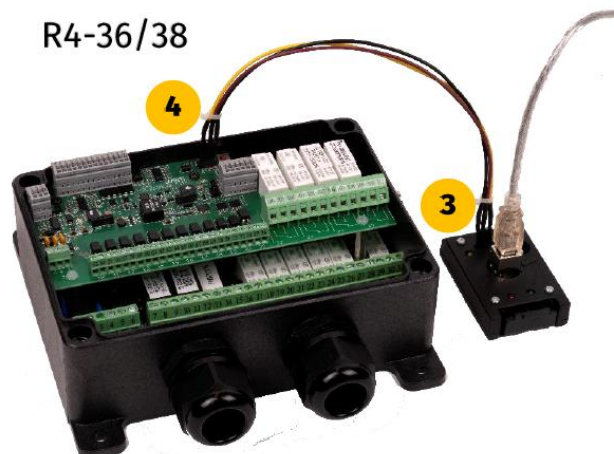


6. Connection to D0008 & TG-LX Modul

Tel.: +49 (0) 9451 - 944 855 0

kontakt@tele-radio-gmbh.de

1. Remove the lid of the receiver
2. Connect the CABLE004-5 with the D2-3 programming adapter
3. Connect the other side of the CABLE004-5 with the receiver. **Do NOT connect the TG-LX receiver with an external power supply!**
4. The connection is active when the green LED on the D2-3 programming adapter is lit on. Check the connection if the red LED is lit on. If you have problems, please contact the Tele Radio customer service.
5. The orange LED is flashing during the programming process.

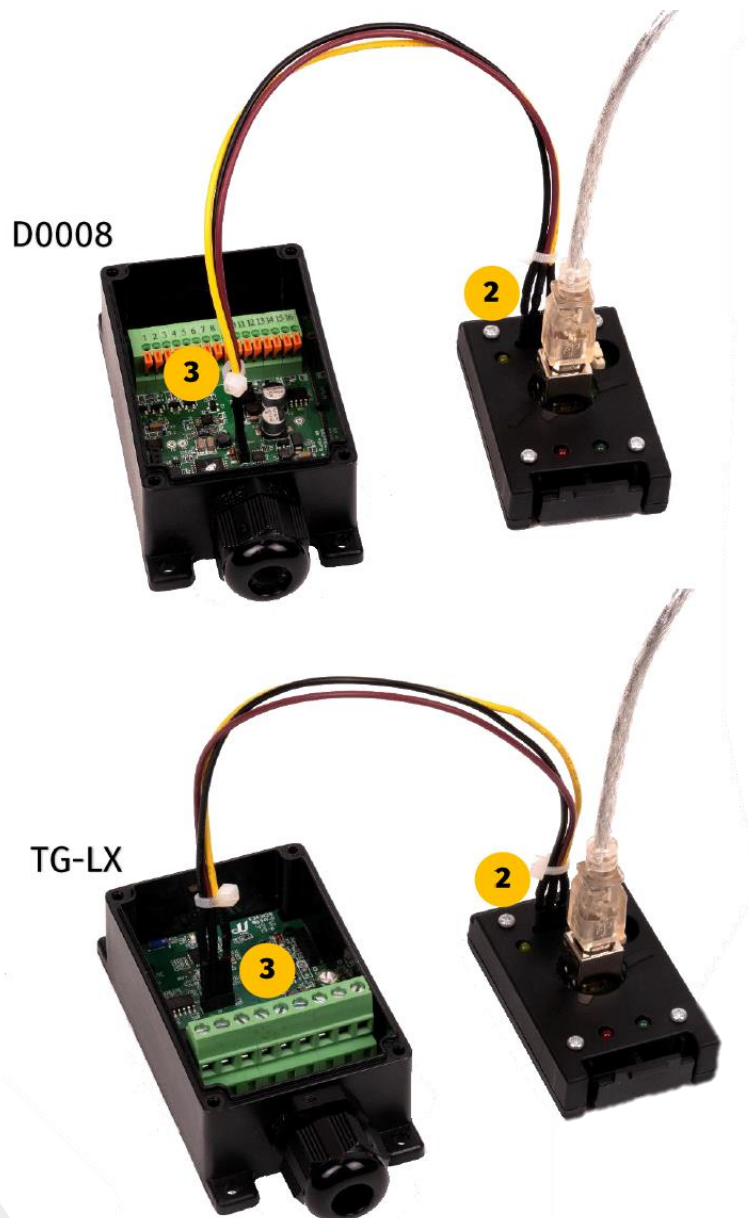

7. Troubleshooting

Tel.: +49 (0) 9451 - 944 855 0

kontakt@tele-radio-gmbh.de

1. The error message “Got NOK” appears

Restart your computer/laptop

2. The red LED of my D2-3 programming adapter is lit on

Check if the USB cable is connected properly. If the USB cable is connected properly and the red LED is still lit on, please contact the Tele Radio customer service.

3. My transmitter/receiver will not be programmed

Make sure that the transmitter is running. The transmitter will automatically turn off after a certain time.

Make sure, that the receiver (EXEPT TG-LX) is connected to an external power supply.