


INSTALLATION INSTRUCTIONS

Transmitter: T19-02

safe

smart

strong

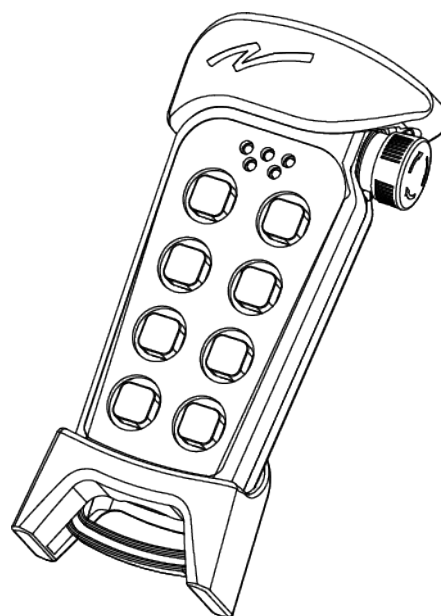

©Tele Radio AB

Datavägen 21

SE-436 32 Askim

Sweden

Phone: +46 (0)31 748 54 60

CHAPTER 1: INTRODUCTION	5
1.1 About this document	7
1.2 About T19 transmitters	8
CHAPTER 2: SAFETY	9
2.1 Warnings & restrictions	9
2.2 Safety features	12
CHAPTER 3: FUNCTIONAL SAFETY	13
3.1 Safety function	13
3.2 Applicable products	13
3.3 Installation	13
3.4 Configuration	14
3.5 Interface	15
CHAPTER 4: TECHNICAL DATA	16
4.1 Transmitter specifications	16
4.2 Radio frequency band	17
CHAPTER 5: PRODUCT GENERAL DESCRIPTION	18
5.1 Transmitter front	18
5.2 Transmitter back	19
5.3 Top LED status indication	19
CHAPTER 6: ERROR INDICATIONS AND CODE MESSAGES	20
CHAPTER 7: OPERATION	21
7.1 General information	21
7.2 Radio mode	22
7.3 Functionality test	23
7.4 Start a session	24
7.5 Log the transmitter out from a receiver	25
7.6 Switch the transmitter off	26
CHAPTER 8: CONFIGURATION MENU	27
8.1 Register the transmitter in a receiver	27
8.2 Menu mode and standard settings	29
8.3 Enter menu mode	30
8.4 Select a radio mode on the transmitter	31
8.5 Replace a transmitter	32
8.6 Show current radio frequency channel	34

8.7 Set the radio inactivity timeout (automatic shutdown)	35
8.8 Load select mode	36
8.9 Logout from Menu mode	38
8.10 Select a radio frequency channel	39
8.11 Load at start-up	41
CHAPTER 9: BATTERY	42
9.1 Battery precautions	42
9.2 Battery information	44
CHAPTER 10: FOILS	46
10.1 Affix a foil to the transmitter	46
CHAPTER 11: WARRANTY, SERVICE, REPAIRS, AND MAINTENANCE	47
CHAPTER 12: REGULATORY INFORMATION	48
12.1 Europe	48
12.2 North America	49
12.3 Brazil	51
12.4 AEC	51
ANNEX A: GLOSSARY	52
ANNEX B: INDEX	53

CHAPTER 1: INTRODUCTION

Thank you for purchasing a Tele Radio AB product



READ ALL INSTRUCTIONS AND WARNINGS CAREFULLY BEFORE MOUNTING, INSTALLING, CONFIGURING AND OPERATING THE PRODUCTS.

These Installation instructions have been published by Tele Radio AB and are not subject to any guarantees. The Installation instructions may be withdrawn or revised by Tele Radio AB at any time and without further notice. Corrections and updates will be added to the latest version of the manual. Always download the Installation instructions from our website, www.tele-radio.com, for the latest available version. Keep the safety instructions for future reference.

IMPORTANT! These instructions are intended for installers and authorized service and distribution centers. The instructions containing information about the installation and configuration of the radio remote control unit on the machine are NOT intended to be passed on to the end user. Only information that is needed to operate the machine correctly by radio remote control may be passed on to the end user.

Tele Radio AB remote controls are often built into wider applications. This documentation is not intended to replace the determination of suitability or reliability of the product for specific user applications and should not be used for this purpose. It is the responsibility of any such users or integrators to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use. Tele Radio AB shall not be responsible or liable for misuse of the information contained herein.

Always refer to the applicable local regulations for installation and safety requirements relating to cranes, hoists, material handling applications, lifting equipment, industrial machinery, and/or mobile hydraulic applications using Tele Radio AB products, e.g.:

- applicable local and industrial standards and requirements,
- applicable occupational health and safety regulations,
- applicable safety rules and procedures for the factory where the equipment is being used,
- user and safety manuals or instructions of the manufacturer of the equipment where Tele Radio AB remote control systems are installed.

Tele Radio AB Installation instructions do not include or address the specific instructions and safety warnings of the end product manufacturer.

For battery precautions, see "9.1 Battery precautions".

Tele Radio AB products are covered by a warranty against material, construction, or manufacturing faults. See "Chapter 11: Warranty, service, repairs, and maintenance".

1.1 About this document

Before installing or operating the product, read the corresponding documentation carefully.

Tele Radio AB's product range is composed of transmitters, receivers, and accessories intended for use together as a system.

These Installation instructions cover general safety issues, main technical specifications, standard installation, configuration and operating instructions, general troubleshooting and battery information. Images shown in this document are for illustrative purposes only.

Please report any error or omission in this document, as well as any improvement or amendment suggestion to td@tele-radio.com.

1.1.1 COPYRIGHT

Information in this document is subject to change without notice. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, photographic, mechanical (including photocopying), recording or otherwise for any purpose other than the purchaser's personal use without the written permission of Tele Radio AB.

1.1.2 TERM AND SYMBOL DEFINITIONS

The capitalized terms and symbol used herein shall have the following meaning:

- **WARNING:** indicates a hazardous situation which, if not avoided, could result in death or serious injury.
- **CAUTION:** indicates a hazardous situation which, if not avoided, will result in minor or moderate injury.
- **IMPORTANT:** is used for information that requires special consideration.
- **NOTE:** is used to address practices not related to physical injury.



This symbol is used to call attention to safety messages that would be assigned the signal words "WARNING" or "CAUTION".

1.2 About T19 transmitters

Tele Radio AB's remote control systems are suitable for a wide variety of applications for e.g. stationary or mobile equipments, hydraulic machines, construction, forestry or agriculture equipments and more. Tele Radio AB's transmitters and receivers are highly customizable and can be configured to suit the most wide-ranging application requirements & usage habits.

T19 transmitters have simplex communication and work in either discontinuous or continuous mode.

CHAPTER 2: SAFETY

2.1 Warnings & restrictions



Carefully read through the following safety instructions before proceeding with the installation, configuration, operation, or maintenance of the product. Failure to follow these warnings could result in death or serious injury.

This product must not be operated without having read and understood the Installation instructions and having received the appropriate training. The purchaser of this product has been instructed how to handle the system safely. The following information is intended for use as a complement to applicable local regulations and standards.

IMPORTANT! Tele Radio AB remote controls are often built into wider applications. These systems should be equipped with:

- a wired emergency stop where necessary
- a brake
- an audible or visual warning signal

2.1.1 INSTALLATION AND COMMISSIONING

IMPORTANT! Only licensed or qualified personnel should be permitted to install the product.



This radio system must not be used in areas where there is a risk of explosion.



Always switch off all electrical power from the equipment before installation procedure.



To utilize the safety features of the system, use the stop relays in the safety circuitry of the object/ equipment to be controlled.



When the equipment controlled by the receiver's standard relays is connected via the stop relays, make sure that the maximum current through the stop relays is still within the specifications. Contact your representative for assistance.



RISK OF UNINTENDED EQUIPMENT OPERATION

Only transmitters that are intended for use should be registered in the receiver.

Failure to follow these instructions could result in death, serious injury, or equipment damage.



RISK OF ELECTRIC SHOCK

The receiver must only be opened by qualified installers or authorized personnel.

Make sure the power supply is switched off before opening the receiver. Failure to follow these instructions could result in death, serious injury, or equipment damage.

2.1.2 OPERATION



Only qualified personnel should be permitted to access the transmitter and operate the equipment.



- Make sure that the user satisfies the age requirements in your country for operating the equipment.
- Make sure that the user is not under the influence of drugs, alcohol and medications.
- Make sure that the user knows and follows operating and maintenance instructions as well as all applicable safety procedures and requirements.

The user should:



- **Always test the transmitter stop button before operating it. This test should be done on each shift, without a load.**
- **Never use a transmitter if the stop button is mechanically damaged. Contact your supervisor or representative for service immediately.**
- **Never leave the transmitter unattended.**
- **Always switch the transmitter off when not in use. Store in a safe place.**
- **Keep a clear view of the work area at all times.**

2.1.3 MAINTENANCE



Before maintenance intervention on any remote controlled equipments:

- **always remove all electrical power from the equipment.**
- **always follow lockout procedures.**

- Keep the safety information for future reference. Always download the Installation instructions from our website, www.tele-radio.com, for the latest available version.
- If error messages are shown, it is very important to find out what caused them. Contact your representative for help.
- The functionality of the stop button should be tested at least after every 200 hours' use.
- If the stop button is mechanically damaged, do not use the transmitter. Contact your supervisor or representative for service immediately.
- Keep the product in a clean, dry place.
- Keep contacts and antennas clean.
- Wipe off dust using a clean, slightly damp cloth.
- Never use cleaning solutions.
- Check the encapsulation, foils and cable for damages. If the encapsulation or foil is damaged, moisture can cause serious damage to the electronics.

2.2 Safety features

2.2.1 STOP BUTTON

IMPORTANT! The Stop button should always be tested before operating the transmitter. This test should be done on each shift, without a load.

To test the stop button:

1. Press the **Stop** button.
2. Twist and release the **Stop** button.

CHAPTER 3: FUNCTIONAL SAFETY

NOTE: The information in this section applies only to the products specified below.

3.1 Safety function

The safety-related stop function in the radio system complies with **EN 13849-1:2015 PLd category 3**. The stop relays on the receiver unit are controlled by the stop button on the transmitter unit. When the stop button is pressed, the stop relays interrupt the power to the safety-related application. The complete end-user system, including the radio system, enters a safe state. The maximum response time for the safety-related stop function is 500 ms.

Safety function	Mission time	MTTFd	DC _{avg}	Category	Achieved PL
Stop function	20 years	100 years	95 %	3	d

3.2 Applicable products

The following products are designed to comply with the appointed safety requirements:

Receivers: **R15-01, R15-02, R15-07, R15-08, R15-13, R15-14, R23**

Transmitter: **T19-02**

NOTE: Both the receiver and the transmitter used in the specific end-user system must be compliant.

3.3 Installation

The stop relays on the receiver unit shall be correctly installed on the end-user system, to ensure that opened/deactivated stop relays interrupt the power to the safety-related application. The safety level of the stop function can only be credited when used in a complete end-user system that complies with EN 13849-1:2015 PLd category 3.


NOTE: The safety level of the stop function on the complete end-user system depends on other subsystem(s) and needs to be calculated by the manufacturer of the complete system.

3.4 Configuration


The default configuration of the receiver unit complies with the appointed safety requirements. Any reconfiguration that breaches the safety requirements will be indicated by a LED on the main board of the receiver unit. Before commissioning the radio system, the installer must check the LED indication.

Function LED	Status	Indicates
PLd status LED (red)	ON	Not compliant with PLd
	OFF	Compliant with PLd


R15-01, R15-02, R15-07, R15-08

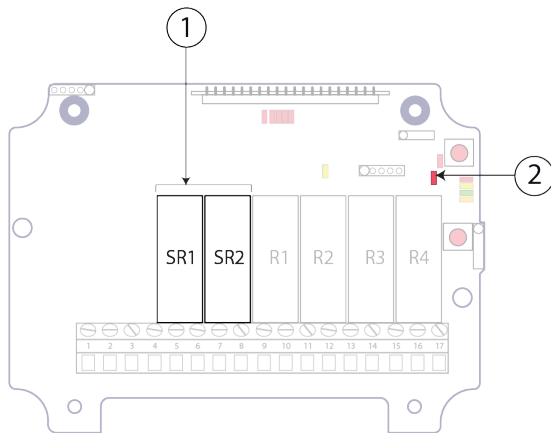

R15-13, R15-14

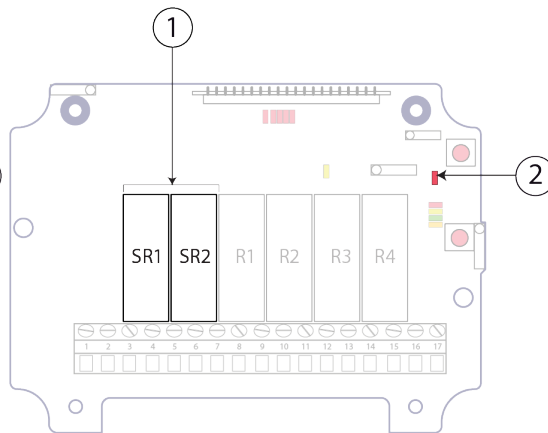

R23

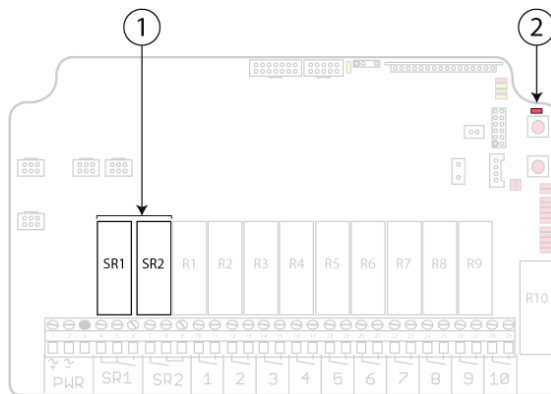

1. Stop relays

2. PLd status LED

IMPORTANT! All safety-related parameters must be configured as follows in order to comply with the appointed safety requirements:

- The system must be configured in continuous radio mode.
- All relays must be switched off when the radio link is down.

- **The radio link timeout must be set to a maximum of 500 ms.**
- **The login/logout function must be activated.**
- **The Custom ID setting must be deactivated, i.e. the receiver must always use the unique transmitter ID code.**
- **The parameter "Require start command" must be activated.** See below for more details.

3.4.1 REQUIRE START COMMAND PARAMETER


When a T19-02 transmitter is started it will send start commands for 200 ms.

- **If 'Require start command' is activated, the receiver is PLd compliant.**
The receiver will not activate the stop relays until it receives a start command from the transmitter. This is to make sure that the stop relays will not activate immediately if the receiver is restarted after a temporary loss of power and the transmitter is still active.
If the receiver has received a start command and the transmitter goes out of range for more than six minutes, a new start packet will be required (i.e. the transmitter will have to be restarted).
- **If 'Require start command' is not checked, the receiver is NOT PLd compliant.**
The stop relays are activated as soon as the receiver receives packets without pressing any button on the transmitter.

3.5 Interface

The radio system comprises one SRP/CS (as defined in EN 13849-1:2015), including the stop button (input), the stop relays (output) and the safety-related logic maintaining the stop function (logic).

The interfaces to the SRP/CS are the stop button (as controlled by the operator) and the stop relays.



→: Interconnection

CHAPTER 4: TECHNICAL DATA

4.1 Transmitter specifications

Number of buttons	8 x 2-step buttons
Power supply	3 x 1.5 V AAA / LR03 in battery pack D4-3
I/O switch	No
Radio communication	Simplex
Radio frequency band	2405 – 2480 MHz
Number of channels	16 (channel 11–26)
Radio frequency output power	EIRP ¹ < 10 dBm (10 mW)
Operating time (continuous usage)	Approximately 100 h with alkaline (depending on settings)
IP code	IP65
Operating temperature	-20...+55 °C / -4...+130 °F
Charging temperature	+10...+35 °C (+50...+95 °F)
Safety levels	EN ISO 13849-1, PLd CAT3 (Stop function, see "Chapter 3: Functional safety")
Dimensions	85 x 193 x 43 mm / 3.4 x 7.7 x 1.7 in
Weight	300 g / 0.7 lbs

¹Equivalent isotropic radiated power

4.2 Radio frequency band


For radio systems operating on frequency band 2.4 GHz, the frequency band is divided into 16 channels (11 to 26). Once the channel has been selected on the transmitter, the receiver will automatically detect and switch to the same channel.

Channel	Frequency (MHz)	Channel	Frequency (MHz)
11	2405	19	2445
12	2410	20	2450
13	2415	21	2455
14	2420	22	2460
15	2425	23	2465
16	2430	24	2470
17	2435	25	2475
18	2440	26	2480

CHAPTER 5: PRODUCT GENERAL DESCRIPTION

The pictures shown in this chapter are for illustrative purposes only.

5.1 Transmitter front

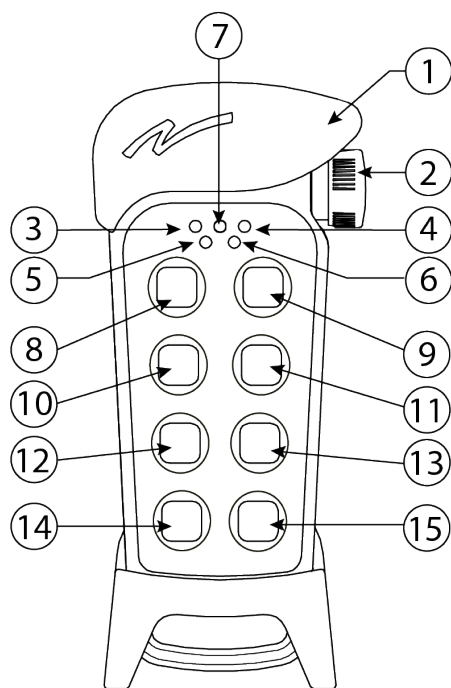

- | | | |
|-----------------------|-------------------------|--|
| 1. Rubber cover | 6. LED 4 (red) | 11. Button 4 |
| 2. Stop button | 7. Top LED (red, green) | 12. Button 5 |
| 3. LED 1 (red) | 8. Button 1 | 13. Button 6 |
| 4. LED 2 (red) | 9. Button 2 | 14. Button 7 – Left Start
button |
| 5. LED 3 (red) | 10. Button 3 | 15. Button 8 – Right Start
Start button |


5.1.1 SHIFT BUTTON

In some cases, the **right Start** button¹ is used as a shift button to access some menus and/or channels.

To activate the shift function, press the shift button and keep it pressed. Press the button corresponding to the desired channel/ menu. Release it, then release the shift button.

¹T19-2: button 8.

5.2 Transmitter back

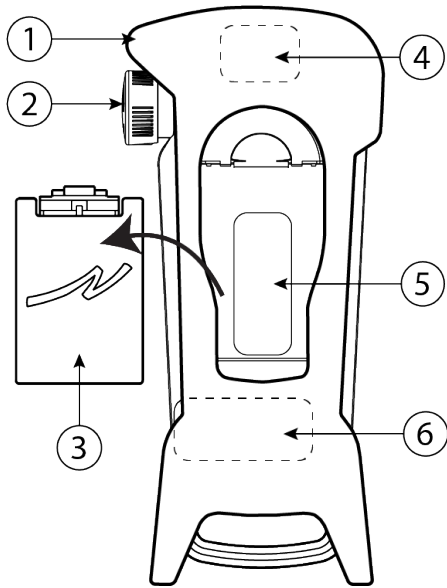


- | | |
|-------------------------|---|
| 1. Rubber cover | 4. Replace ID label (under the rubber cover) |
| 2. Stop button | 5. Product label (inside the battery compartment) |
| 3. Battery/Battery pack | 6. FCC/IC label (under the rubber cover) |

5.3 Top LED status indication

The top LED is a multicolored LED that lights or flashes green when the battery capacity is good and red when the battery capacity is poor. When the top LED lights/flashes red, battery should be charged or changed at the next convenient opportunity (see "9.2.1 Change the batteries in battery pack D4-3").

CHAPTER 6: ERROR INDICATIONS AND CODE MESSAGES

Each error is identified by a code indicated by a LED combination including the top LED (LED 0) and LEDs 1–4.

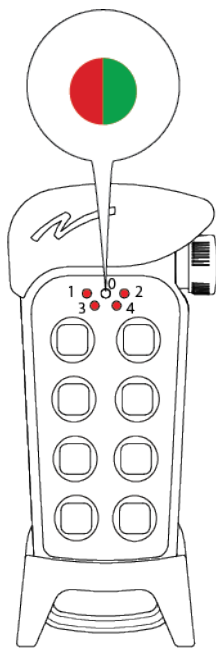

●: LED is lit (red). ○: LED is off

⊙: LED is blinking green/red.

NOTE: The following error indications apply for models with **SW version 18 or higher**.

LED0 green/red	LED1 red	LED2 red	LED3 red	LED4 red	Indicates
⊙	●	○	○	○	Production data error
⊙	○	●	○	○	Radio initialization has failed
⊙	●	●	○	○	Stop button test is required
⊙	○	○	●	○	CPU2 will power off the radio module
⊙	●	○	○	●	Stop button memory error
⊙	○	●	●	○	Flow control error

CHAPTER 7: OPERATION

7.1 General information

7.1.1 RECEIVERS WITH LOGIN/LOGOUT¹ FUNCTION ACTIVATED

To control a receiver, the transmitter must be registered and logged in to the receiver. If another transmitter is already logged in to the receiver, it must be logged out before a different transmitter can be logged in.

If no transmitter is logged in to the receiver, the first registered transmitter to be started will automatically log in to the receiver. Once a transmitter has been logged in, it will remain logged in until it is manually logged out.

More than one transmitter can be registered in the receiver, but only one transmitter can be logged in at a time.

NOTE: For the logout function to work, BOTH the receiver and the transmitter must have the logout function activated and be set to continuous radio mode.

7.1.2 RECEIVERS WITHOUT LOGIN/LOGOUT FUNCTION OR WITH LOGIN/LOGOUT FUNCTION INACTIVATED

To control a receiver, the transmitter must be registered in the receiver.

If no transmitter is controlling the receiver, the first registered transmitter to be started will automatically take control of the receiver. Switching the transmitter off will free the receiver and allow any other registered transmitter that is started to control the receiver.

More than one transmitter can be registered in the receiver, but only one transmitter can control the receiver at a time.

7.1.3 MULTIPLE TRANSMITTERS REGISTERED IN A SAME RECEIVER

If more than one transmitter is registered in the same receiver, it is recommended to select the same frequency channel on all transmitters.

¹For more information about login/logout, see the transmitter installation instruction

7.2 Radio mode

NOTE: To establish a radio link between the transmitter and the receiver, both units must be set to the same radio mode.

This transmitter is set to **continuous** radio mode by default. The transmitter starts to transmit continuously as soon as it is started. The radio transmission ends when the stop button is pressed. When the system is in continuous radio mode, buttons 7 and 8 are used as start buttons.

To switch radio mode in the transmitter, see "8.4 Select a radio mode on the transmitter".

NOTE: Some functions are only available when the products are transmitting continuously. Those functions are marked: "Only for continuous radio mode" in the manual.

7.3 Functionality test

NOTE: This list is intended for use as a support for the manufacturer of the equipment where Tele Radio AB remote control systems are installed.

Before operating the radio system, follow the procedure below.

IMPORTANT! This test should be performed at each shift, without a load, and should include but not be limited to the following steps

- Make sure that the controlled object can not cause any harm in the event of unexpected movement.
- Always follow local safety rules and start the equipment according to the corresponding instructions.
- Make sure that the transmitter can control the receiver by testing all functions.
- Make sure that the functions respond as expected.
- Make sure that all movements are as planned.
- Make sure that the stop button works correctly.
- Make sure that the stop function works correctly.
- Make sure the system stops when the batteries are removed from the transmitter.

7.4 Start a session

To be able to control a receiver with the transmitter, the transmitter must be registered in the receiver.

When starting the transmitter, it will automatically log in to the receiver(s) it has been registered in, provided that no other transmitter is already logged in to the receiver(s). If the transmitter was not logged out after the last session, it will remain logged in when starting a new session.



When not in use, transmitters must be switched off and stored in a secure storage space.



Do not use the system if the stop button is damaged or if it does not stop the equipment. Doing so could result in serious injury or death.

1. Make sure that the **Stop** button is pressed.
2. Twist and release the **Stop** button.
The top LED lights. LEDs 3 and 4 flash (red).
3. Press buttons 7 and 8 simultaneously for at least 1 second.
LEDs 3 and 4 light (red).
4. Release buttons 7 and 8.
LEDs 3 and 4 go out. The top LED flashes.
5. Proceed with the functional test (see "7.3 Functionality test").

7.5 Log the transmitter out from a receiver

IMPORTANT! For the logout function to work, **BOTH** the receiver and the transmitter must have the logout function activated and be set to continuous radio mode.

A transmitter already logged in to the receiver has to be logged out before any other transmitter can be logged in. If a transmitter has been lost or seriously damaged, use the replace procedure on the transmitter.

NOTE: Logout can only be performed when the transmitter is on and a radio link with one or more receivers has been established. The receiver must be powered-up for the logout procedure to be successful.

NOTE: The logout procedure will log the transmitter out from all receivers that are part of the radio session.

NOTE: The logout function cannot be activated/deactivated from the transmitter. Contact your representative for assistance.

For this transmitter, the logout function is activated by default.¹

7.5.1 QUICK LOGOUT

1. Make sure that the transmitter is started. If not, twist and release the **Stop** button.
2. Press and hold button 7.
3. Press the **Stop** button.
The top LED lights (red).
4. Release button 7.
The transmitter takes approximately 3 seconds to logout. The transmitter turns off.

It is also possible to log out from the **Menu mode**, see "8.9 Logout from Menu mode".

¹Check the receiver installation instructions for more details about the logout function in the receiver.

7.6 Switch the transmitter off

NOTE: When the transmitter is switched off, it remains logged in to the receiver(s). To logout, see the section "7.5 Log the transmitter out from a receiver".

1. Press the **Stop** button.
The transmitter sends a Stop command to the receiver. The transmitter turns off.

CHAPTER 8: CONFIGURATION MENU

8.1 Register the transmitter in a receiver

NOTE: The registration instructions require access to the receiver circuit board. Before starting the registration of a transmitter, prepare the receiver as follow:

RISK OF ELECTRIC SHOCK



The receiver must only be opened by qualified installers or authorized personnel.

Make sure the power supply is switched off before opening the receiver. Failure to follow these instructions could result in death, serious injury, or equipment damage.

1. Remove the front cover of the receiver. Use a screwdriver to remove the screws.
2. Power the receiver up.
The Power LED lights (yellow).
3. Proceed with the registration procedure for the corresponding receiver.

8.1.1 REGISTER THE TRANSMITTER

RISK OF UNINTENDED EQUIPMENT OPERATION



Only transmitters that are intended for use should be registered in the receiver.

Failure to follow these instructions could result in death, serious injury, or equipment damage.

RISK OF UNINTENDED EQUIPMENT OPERATION



Do not perform this action when the receiver is in a session with another transmitter. The radio communication may be interrupted or broken.

Failure to follow these instructions could result in death, serious injury, or equipment damage.

NOTE: For the registration procedure to be successful, the receiver must be powered up.

NOTE: To establish a radio link between the transmitter and the receiver, both units must be set to the same radio mode.

1. Make sure that the **Stop** button is pressed.
2. Twist and release the **Stop** button.
The top LED lights. LEDs 3 and 4 flash (red).
3. Press buttons 7 and 8 simultaneously for at least 1 second.
LEDs 3 and 4 light (red).
4. Release buttons 7 and 8.
LEDs 3 and 4 go out. The top LED flashes.

ON THE RECEIVER¹

5. Press the receiver **Function** button.
6. Press the receiver **Select** button.

ON THE TRANSMITTER

7. Press and hold buttons 1 and 2².
8. Release buttons 1 and 2.
The transmitter is registered.

If no transmitter is found within approximately 10 seconds, the receiver exits to normal operation. Go back to step 1 and try again.

¹See the receiver installation instructions for more detailed information.


²Default buttons.

8.2 Menu mode and standard settings

The **Menu mode** allows for certain settings to be set directly from the transmitter. Once in **Menu mode**, the following menus will be available.

In some cases, the **right Start** button¹ is used as a shift button to access some menus and channels.

To activate the shift function, press the shift button and keep it pressed. Press the button corresponding to the desired menu/ channel number. Release it, then release the shift button.

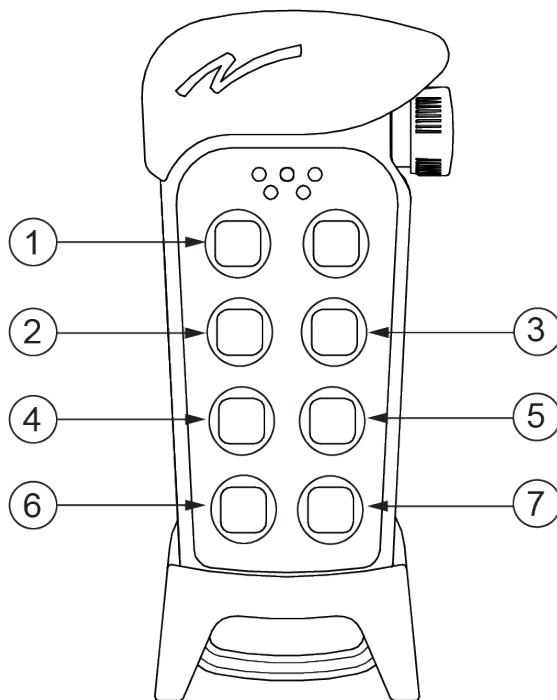

1	Radio mode	Change the radio mode in the transmitter
2	Replace	Replace a lost or damaged transmitter
3	Show channel	Show the channel currently used
4	Automatic shutdown	Enable/Disable the auto-shutdown option
5	Load select mode	Select a load option (0-4)
6	Logout	Log out the transmitter from a receiver
7 + 3	Switch channel	Select the channel to use
7 + 5	Load at start-up	Select the default load at start up

¹T29-12: button 12.

8.3 Enter menu mode

1. Make sure that the **Stop** button is pressed.
2. Press and hold button 8.
3. Twist and release the **Stop** button.
4. Release button 8.
The top LED flashes (green).

WITHIN 1 MINUTE OF RELEASING THE STOP BUTTON:

5. Press buttons 1, 2, 3, 4 in sequence to enter **Menu mode**.
The top LED flashes (green) and LEDs 1–4 flash (red).
If the code is invalid, the transmitter turns off. Go back to step 1 and try again.

WITHIN 1 MINUTE OF ENTERING THE CODE:

6. Select a menu by pressing a button according to the following table.

Menu	T19-02
Radio mode	Button 1
Replace	Button 3
Show channel	Button 4
Automatic shutdown	Button 5
Load select mode	Button 6
Logout	Button 7
Switch channel	Press and hold button 8 (shift) + press button 4
Load at start-up	Press and hold button 8 (shift) + press button 6

If no buttons are pressed within 1 minute, the transmitter will turn off.

8.4 Select a radio mode on the transmitter

NOTE: To establish a radio link between the transmitter and the receiver, both units must be set to the same radio mode.

NOTE: Check the radio mode required by the **Operating mode** selected in the receiver¹ before following the instructions below.

1. Make sure that the **Stop** button is pressed.
2. Press and hold button 8.
3. Twist and release the **Stop** button.
4. Release button 8.
The top LED flashes (green).

WITHIN 1 MINUTE OF RELEASING THE STOP BUTTON:

5. Press buttons 1, 2, 3, 4 in sequence to enter **Menu mode**.
The top LED flashes (green) and LEDs 1–4 flash (red).
If the code is invalid, the transmitter turns off. Go back to step 1 and try again.

WITHIN 1 MINUTE OF ENTERING THE CODE:

6. Press button 1 to enter the [Radio mode] menu.
The top LED lights (green). LED 2 flashes (red).
7. Select the radio mode by pressing a button according to the following table.

Radio mode	T19-02
Continuous (default)	Button 1
Discontinuous	Button 2

The top LED flashes (green) 3 times. The transmitter turns off.

¹See the receiver installation instructions for more detailed information.

8.5 Replace a transmitter

It is possible to replace a registered transmitter with another transmitter of the same model. The procedure does not require to open the receiver housing but the receiver needs to be powered up and within transmission range.

RISK OF UNINTENDED EQUIPMENT OPERATION




Do not perform this action when the receiver is in a session with another transmitter. The radio communication may be interrupted or broken.

Failure to follow these instructions could result in death, serious injury, or equipment damage.



The replacement transmitter will control all receivers it has been registered in, provided that no other transmitter is logged in.

IMPORTANT! Before replacing a damaged or missing transmitter with a new one, check if the transmitter used as replacement is already registered in any other receiver. If necessary, erase the transmitter from other receivers before performing the replacement procedure.

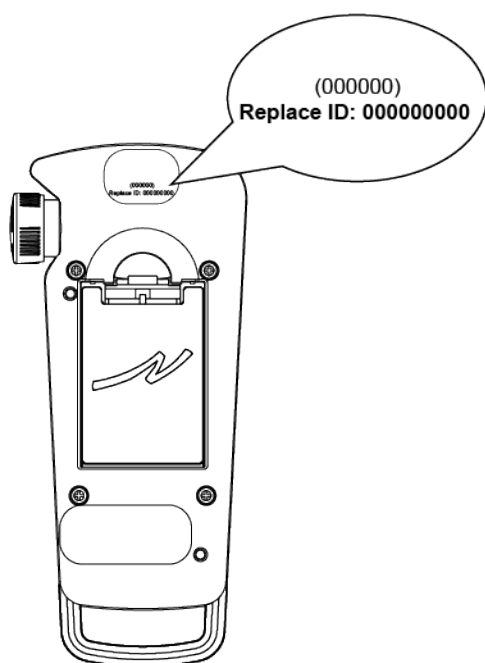

The Replace ID label is placed in the back of the transmitter. Remove the rubber cover.

IMPORTANT! The replacement ID to be used is the one associated to the transmitter to be replaced (i.e. the old, lost or damaged transmitter).

IMPORTANT! When entering the last digit in the code, keep that button pressed until the stop button has been pressed.

1. Make sure that the **Stop** button is pressed.
2. Press and hold button 8.
3. Twist and release the **Stop** button.
4. Release button 8.
The top LED flashes (green).

WITHIN 1 MINUTE OF RELEASING THE STOP BUTTON:

5. Press buttons 1, 2, 3, 4 in sequence to enter **Menu mode**.
The top LED flashes (green) and LEDs 1–4 flash (red).
If the code is invalid, the transmitter turns off. Go back to step 1 and try again.

WITHIN 1 MINUTE OF ENTERING THE CODE:

6. Press button 3 to enter the [Replace] menu.
The top LED lights (green). LED 2 flashes (red).
7. Enter the first digit of the Replace ID (a maximum of 11 digits between 1–8) of the transmitter **to be replaced** (i.e. the old, lost or damaged transmitter). The transmitter buttons 1–8 correspond to digits 1–8.
LED 3 lights (red) when a valid digit has been entered.
8. Repeat step 7 until the penultimate digit.
9. Enter the last digit of the Replace ID **and keep the button pressed**.
LEDs 3 and 4 light (red) when the maximum number of digits (11) have been entered.
10. Press the **Stop** button.
11. Release the button of the Replace ID's last digit.
After approximately 10 seconds the transmitter turn off.

NOTE: If the last digit number's button is not pressed while pressing the **Stop** button, the transmitter will exit Replace menu without sending the replace command.

8.6 Show current radio frequency channel

1. Make sure that the **Stop** button is pressed.
2. Press and hold button 8.
3. Twist and release the **Stop** button.
4. Release button 8.
The top LED flashes (green).

WITHIN 1 MINUTE OF RELEASING THE STOP BUTTON:

5. Press buttons 1, 2, 3, 4 in sequence to enter **Menu mode**.
The top LED flashes (green) and LEDs 1–4 flash (red).
If the code is invalid, the transmitter turns off. Go back to step 1 and try again.

WITHIN 1 MINUTE OF ENTERING THE CODE:

6. Press button 4 to enter the [Show channel] menu.
The top LED lights (green).
LED 1 flashes a number of times corresponding to the first digit.
*LED 2 flashes a number of times corresponding to the second digit.*¹

¹Example: For channel 23, LED 1 will flash 2 times, LED 2 will flash 3 times.

8.7 Set the radio inactivity timeout (automatic shutdown)

NOTE: Only for **continuous** radio mode.

Set the off delay (in seconds) before the transmitter automatically turns off. Automatic shutdown helps prolong battery capacity by automatically turning the transmitter off after a preset period of inactivity.

1. Make sure that the **Stop** button is pressed.
2. Press and hold button 8.
3. Twist and release the **Stop** button.
4. Release button 8.
The top LED flashes (green).

WITHIN 1 MINUTE OF RELEASING THE STOP BUTTON:

5. Press buttons 1, 2, 3, 4 in sequence to enter **Menu mode**.
The top LED flashes (green) and LEDs 1–4 flash (red).
If the code is invalid, the transmitter turns off. Go back to step 1 and try again.

WITHIN 1 MINUTE OF ENTERING THE CODE:

6. Press button 5 to enter the [Automatic shutdown] menu.
The top LED lights (green). LED 2 flashes (red).
7. Select the automatic shutdown time by pressing a button according to the following table.

Automatic shutdown time	T19-02
3 minutes	Button 1
6 minutes	Button 2
12 minutes	Button 3
No automatic shutdown	Button 7

The top LED flashes (green) 3 times. The transmitter turns off.

8.8 Load select mode

NOTE: Only for **continuous** radio mode.

1. Make sure that the **Stop** button is pressed.
2. Press and hold button 8.
3. Twist and release the **Stop** button.
4. Release button 8.
The top LED flashes (green).

WITHIN 1 MINUTE OF RELEASING THE STOP BUTTON:

5. Press buttons 1, 2, 3, 4 in sequence to enter **Menu mode**.
The top LED flashes (green) and LEDs 1–4 flash (red).
If the code is invalid, the transmitter turns off. Go back to step 1 and try again.

WITHIN 1 MINUTE OF ENTERING THE CODE:

6. Press button 6 to enter the [Load select mode] menu.
The top LED lights (green). LED 2 flashes (red).
7. Select a **Load select** mode by pressing a button according to the following table.


Load select mode	Default load selected at start-up ¹	T19-02
1	A	Button 1
2	A	Button 2
3	A	Button 3
4	A	Button 4
0 (default)	none	Button 7

The top LED flashes (green) 3 times. The transmitter turns off.


¹Load at start-up can be changed later on, see "Chapter 1: Load at start-up".

8.8.1 LOAD SELECT MODE 0-4


Load select mode 0

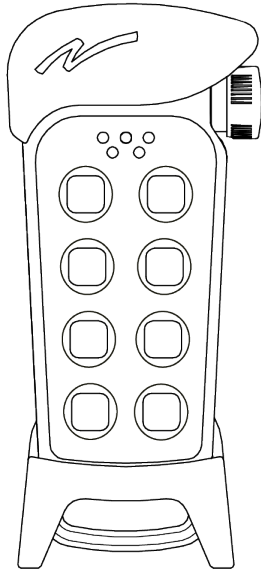


Load select mode 1

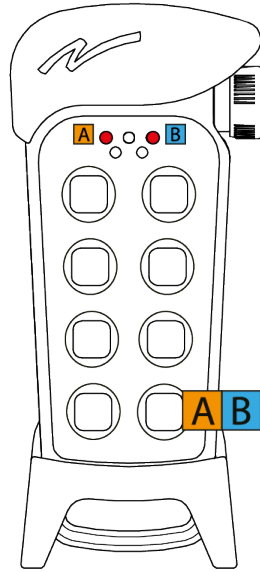


Load select mode 2

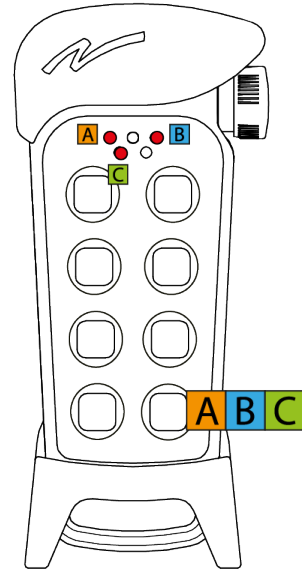

Load select mode 3

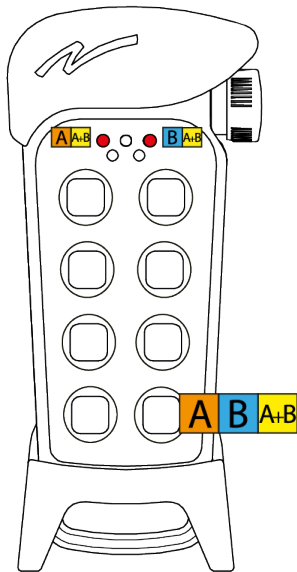

Load select mode 4

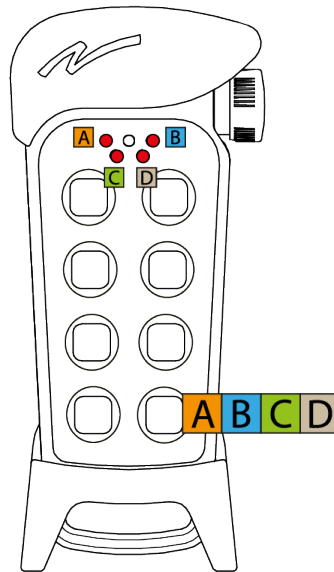

8.9 Logout from Menu mode

This logout option is mainly used when the button for quick logout is used by another function.

IMPORTANT! For the logout function to work, BOTH the receiver and the transmitter must have the logout function activated and be set to continuous radio mode.

NOTE: Logout can only be performed when the transmitter is on and a radio link with one or more receivers has been established. The receiver must be powered-up for the logout procedure to be successful.

1. Make sure that the **Stop** button is pressed.
2. Press and hold button 8.
3. Twist and release the **Stop** button.
4. Release button 8.
The top LED flashes (green).

WITHIN 1 MINUTE OF RELEASING THE STOP BUTTON:

5. Press buttons 1, 2, 3, 4 in sequence to enter **Menu mode**.
The top LED flashes (green) and LEDs 1–4 flash (red).
If the code is invalid, the transmitter turns off. Go back to step 1 and try again.

WITHIN 1 MINUTE OF ENTERING THE CODE:

6. Press button 7.
The top LED flashes (red).
The transmitter takes approximately 10 seconds to logout. The transmitter turns off.

8.10 Select a radio frequency channel

1. Make sure that the **Stop** button is pressed.
2. Press and hold button 8.
3. Twist and release the **Stop** button.
4. Release button 8.
The top LED flashes (green).

WITHIN 1 MINUTE OF RELEASING THE STOP BUTTON:

5. Press buttons 1, 2, 3, 4 in sequence to enter **Menu mode**.
The top LED flashes (green) and LEDs 1–4 flash (red).
If the code is invalid, the transmitter turns off. Go back to step 1 and try again.

WITHIN 1 MINUTE OF ENTERING THE CODE:

6. Press and hold button 8.
7. Press button 4.
8. Release button 4.
9. Release button 8.
The top LED lights (green). LED 2 flashes (red). The transmitter enters the [Switch channel] menu.
10. Enter the first digit of the new channel (11–26) by pressing the buttons according to the following table.¹

Digit	T19-02
1–6	Buttons 1–6
7	Press and hold button 8 (shift) + press button 1
8	Press and hold button 8 (shift) + press button 2
9	Press and hold button 8 (shift) + press button 3
0	Press and hold button 8 (shift) + press button 4

LED 3 lights (red) when a valid digit has been entered.

¹For example channel 20: Press button 2 for the first digit. For zero, press and hold button 8, press button 4, release button 4, release button 8.

11. Enter the second digit.

LED 4 lights (red) when a valid digit has been entered.

The top LED flashes (green) 3 times. The transmitter turns off.

To check that the channel has been properly changed, follow the "8.6 Show current radio frequency channel".

8.11 Load at start-up

NOTE: Make sure to have a **Load select** mode selected before following the instructions below.

1. Make sure that the **Stop** button is pressed.
2. Press and hold button 8.
3. Twist and release the **Stop** button.
4. Release button 8.
The top LED flashes (green).

WITHIN 1 MINUTE OF RELEASING THE STOP BUTTON:

5. Press buttons 1, 2, 3, 4 in sequence to enter **Menu mode**.
The top LED flashes (green) and LEDs 1–4 flash (red).
If the code is invalid, the transmitter turns off. Go back to step 1 and try again.

WITHIN 1 MINUTE OF ENTERING THE CODE:

6. Press and hold button 8.
7. Press button 6.
8. Release button 6.
9. Release button 8.
The top LED lights (green). LED 2 flashes (red). The transmitter enters the [Load at start-up] menu.
10. Select the load at start-up by pressing a button according to the following table.

Load at start-up	T19-02
A	Button 1
B	Button 2
A+B	Button 3
none	Button 7

The top LED flashes (green) 3 times. The transmitter turns off.

CHAPTER 9: BATTERY

9.1 Battery precautions

Carefully read the following safety instructions and warnings before using, charging or disposing of the batteries.



Batteries contain flammable substances such as lithium or other organic solvents, which may result in overheating, rupture or combustion. Failure to read and follow the below instructions may result in fire, personal injury and damage to property if charged or used improperly.

9.1.1 HANDLING AND STORAGE



- Risk of explosion if battery is replaced with a battery of an incorrect type.
- Do not short-circuit, disassemble, deform or heat batteries.
- Never attempt to charge a visibly damaged or frozen battery.
- Do not use or charge the battery if it appears to be leaking, deformed or damaged in any way.
- Do not solder directly onto batteries.
- Do not leave the battery in the charger once it is fully charged.
- Store in a cool location. Keep batteries away from direct sunlight, high temperature, and high humidity.
- Immediately discontinue use of the battery if, while using, charging, or storing the battery, the battery emits an unusual smell, feels hot, changes color, changes shape, or appears abnormal in any other way.
- Keep batteries out of reach of small children. Should a child swallow a battery, consult a physician immediately.

9.1.2 DISPOSAL

When discarding batteries, insulate the + and - terminals of batteries with insulating/ masking tape.




- **Do not place multiple batteries in the same plastic bag.**
- **Do not incinerate or dispose of batteries in fire.**
- **Do not place used batteries in the household waste. Dispose of used batteries in accordance with the applicable regulations and legal requirements.**
- **Batteries that have been disposed of incorrectly may short circuit, causing them to become hot, burst or ignite.**

9.2 Battery information

NOTE: Only batteries approved by Tele Radio AB should be used in T19 transmitters.

NOTE: When approximately 10 % of the battery capacity remains, the Top LED will light red.

Two different battery types – D4-2 and D4-3 – are available for use in the transmitter. By default, the transmitter is supplied with a D4-3 battery pack.

	D4-2	D4-3
Type of battery	Replaceable, rechargeable lithium-ion battery	Replaceable battery pack for 3 x 1.5 V AAA / LR03 batteries ¹
Article number	M245060	–
Operating time	Approximately 150 h (depending on settings)	Approximately 100 h with alkaline (depending on settings)
Charge	Tele Radio charger unit ² , 5 V DC, 10 % (1A)	<div style="border: 2px solid black; padding: 5px; text-align: center;">  <p>Do not charge in the Tele Radio AB charger unit.</p> </div> <p>Replace the batteries inside the battery pack.</p>
Article number	M769755 + M769780 or M769755 + M769746	
Charging time	Approximately 4 hours with an empty battery	–
Charging temperature	+10...+35 °C (+50...+95 °F)*	–
Long term storage temperature	-5...+35 °C (+23...+95 °F)	–

NOTE: M769755 must be purchased together with an adapter, either AC (M769780) or DC (M769746).

¹Not included.

²Must be purchased separately.

NOTE: Electronics and batteries must be physically separated before disposal. Make sure that electronics or batteries are not disposed of in household waste.

9.2.1 CHANGE THE BATTERIES IN BATTERY PACK D4-3



Do not charge battery pack D4-3 in the Tele Radio AB charger unit or in any other charger.

Attempts to recharge may cause rupture or hazardous liquids to leak, which will corrode the equipment.

NOTE: Electronics and batteries must be physically separated before disposal.

1. Remove the battery pack from the back of the transmitter.
2. Open the battery pack.
3. Replace the 3 x 1.5 V AAA / LR03 batteries. Use alkaline batteries for optimal performance.
4. Put the battery pack back in the transmitter.

9.2.2 CHARGE THE D4-2 BATTERY IN THE TABLE CHARGER

IMPORTANT! Only for D4-2, replaceable, rechargeable lithium-ion battery.

1. Remove the battery from its compartment and place it in the Tele Radio AB battery charger.
2. The charger's LED lights red while the battery is charging.
3. The charger's LED turns green when the battery is fully charged.
4. Put the battery back into the transmitter's battery compartment.

CHAPTER 10: FOILS

Foils are used to customized transmitters depending on the application. Tele Radio AB foils are made of durable, soft, flexible GO-PU/SM polyurethane film with a semi-matt surface on the front side.

Before affixing a foil to a transmitter, read the recommendation below.

- To obtain optimum adhesion, the bonding surfaces must be clean, dry and well unified. Some typical surface cleaning solvents are isopropyl alcohol (99.5%) or heptane.

NOTE: Carefully read and follow the manufacturer's precautions and directions for use when working with solvents. These cleaning recommendations may not be compliant with the rules of certain Air Quality Management Districts in California; consult applicable rules before use.

- Ideal tape application temperature range is 21 °C to 38 °C (70 °F to 100 °F).
- Initial tape application to surfaces at temperatures below 10 °C (50 °F) is not recommended because the adhesive becomes too firm to adhere readily. However, once properly applied, low temperature holding is generally satisfactory.

10.1 Affix a foil to the transmitter

1. Wipe the front of the transmitter with rubbing alcohol or other appropriate cleaner that won't leave any residue.
2. Dry with a clean cloth.
3. Peel off one side of the backing paper.
4. Position the side of the foil on the corresponding side of the transmitter.
5. While holding onto the side, gently press the foil onto the surface from the side out to the center.
6. Peel away the rest of the backing paper .
7. Slowly apply the other side of the foil, gently press from the center to the end.
8. Inspect the foil. If you see loose areas or bubbles, the surface probably wasn't warm or clean enough. Press the foil firmly against the surface to ensure good adhesion.

CHAPTER 11: WARRANTY, SERVICE, REPAIRS, AND MAINTENANCE

Tele Radio AB products are covered by a warranty against material, construction and manufacturing faults. During the warranty period, Tele Radio AB may replace the product or faulty parts. Work under warranty must be performed by Tele Radio AB or by an authorized service center specified by Tele Radio AB.

The following are **not** covered by the warranty:

- Faults resulting from normal wear and tear
- Parts of a consumable nature
- Products that have been subject to unauthorized modifications
- Faults resulting from incorrect installation and use
- Damp and water damage

Maintenance

Repairs and maintenance must be performed by qualified personnel

Only use spare parts from Tele Radio AB

Contact your representative for service or any other assistance

Keep the product in a clean, dry place

Keep contacts and antennas clean

Wipe off dust using a slightly damp, clean cloth

NOTE: Never use cleaning solutions or high-pressure washer.

CHAPTER 12: REGULATORY INFORMATION

NOTE: Models including additional naming conventions:

Model	Article names	Additional naming conventions
T19	T19-02	T19-2, T00019-02, PN-T19-2, PN-T19-02

12.1 Europe

Applies to:

T19-02

12.1.1 CE MARKING

Hereby, Tele Radio AB, declares that the radio equipment type(s) listed above is/ are in compliance with the Radio Equipment Directive 2014/53/EU.

The latest version of the complete EU Declaration of Conformity is available on the Tele Radio AB website, www.tele-radio.com.

12.1.2 WEEE DIRECTIVE



This symbol means that inoperative electrical and electronic products must not be mixed with household waste. The European Union has implemented a collection and recycling system for which producers are responsible. For proper treatment, recovery and recycling, please take this product to a designated collection point.

Tele Radio AB strives to minimize the use of hazardous materials, promotes reuse and recycling, and reduces emissions to air, soil and water. When a commercially viable alternative is available, Tele Radio AB strives to restrict or eliminate substances and materials that pose an environmental, health or safety risk.

12.2 North America

Applies to:

T19-02

12.2.1 FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

12.2.2 IC STATEMENT

This product complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage;
2. l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

12.2.3 FCC/IC LABELS

The FCC ID and IC numbers can be found on the product label.

FCC ID: ONFC1409A

IC: 4807A-C1409A

12.3 Brazil

Applies to:

T19-02

12.3.1 ANATEL STATEMENT (DECLARAÇÃO ANATEL)

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

Este produto não é apropriado para uso em ambientes domésticos, pois poderá causar interferências eletromagnéticas que obrigam o usuário a tomar medidas necessárias para minimizar estas interferências.

12.4 AEC

Applies to:

T19-02

12.4.1 AEC STATEMENT (ДЕКЛАРАЦИЯ ЕАС)

This product is declared as compliant within Eurasian Economic Union (EAC). EAC declaration is available on request.

ANNEX A: GLOSSARY

DC

Diagnostic Coverage

FIT

Failures in time (1 FIT = 1 failure per 10^9 hours)

HFT

Hardware Fault Tolerance

MTTF

Mean Time To Failure

PFH

Probability of Failure per Hour

PL

Performance level

SFF

Safety Failure Fraction

SIL


Safety Integrity Level

ANNEX B: INDEX

A	
AEC Statement	51
ANATEL Statement	51
Automatic shutdown	35
B	
Battery	
Battery information	44
Change batteries in battery pack D4-3	45
Charge	45
Battery precautions	42
Handling	42
Storage	42
C	
Charging temperature	16
Configuration menu	29
D	
Dimensions	16
Disposal	43
E	
EIRP	16
F	
FCC statement	49
FCC/IC labels	50
Foils	46
Functionality test	23

I	
IC Statement	49
Inactivity timeout	35
IP code	16
L	
Load at start-up	41
Load select mode	36
Log out	25
Logout from Menu mode	38
Quick logout	25
M	
M245060	44
Maintenance	47
Menu mode	29
Enter Menu mode, no PIN code	30
N	
Number of channels	16
O	
Operating temperature	16
Operating time	16
P	
Power supply	16
R	
Radio communication	16
Radio frequency band	16
2.4 GHz	17
Frequency channels	17

Radio frequency output power	16
Radio mode	22
Register	27
Replace	32
S	
Safety Features	12
Safety standards	16
Select a Radio frequency	39
Show current radio frequency channel	34
Start a session	24
Start the transmitter	24
Stop button	12
Storage temperature	
Battery	44
Switch off	26
Switch radio mode	31
T	
Top LED	19
Transmitter back	19
Transmitter front views	18
W	
Warnings & restrictions	9
Installation and commission	9
Maintenance	11
Operation	10
WEEE directive	48
Weight	16

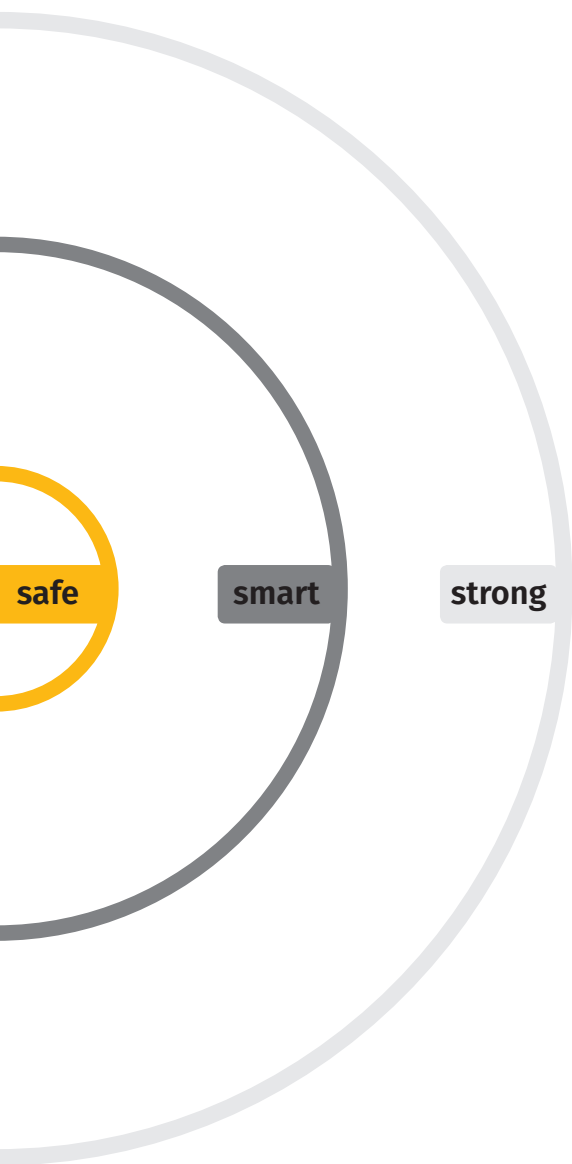

 **tele radio**[®]
wireless solutions

These Installation instructions are subject to change without prior notice.

Download the latest Installation instructions from www.tele-radio.com.